

LSPU8643X



| | |
|-------------------|------------------------|
| Product Family | Dishwashers |
| Commercial width | 60 cm |
| Commercial height | 86 cm |
| Installation | Under counter built-in |
| N° baskets | 3, FlexiDuo |
| Motor | Single phase |
| EAN code | 8017709303747 |



Programs / Functions



| | | | |
|----------------------|-------------------------------|-----------------|-----|
| N. of programmes | 10+1 | Delicate | Yes |
| Washing temperatures | 38, 45, 50, 55, 65, 70, 75 °F | Normal | Yes |
| Soak | Yes | Crystal & China | Yes |
| Express 27' | Yes | Eco express | Yes |
| Mix | Yes | Express 60' | Yes |
| Self clean | Yes | Pots & Pans | Yes |
| Sterilise | Yes | | |

Options



| | | | |
|--------------------|----------------|---------------------------|-----|
| Dry Assist option | Yes | 1/2 load FlexiZone option | Yes |
| Delay timer option | Up to 24 hours | Special programs option | Yes |

Baskets



| | | | |
|---------------------------------------|------------------------|---------------------------------------|-----------------------|
| Basket components colour | Grey | Lower Basket | With 2 foldable racks |
| Upper Basket | With 1 foldable rack | Lower basket with anti-drip inserts | Yes |
| Glass holder | Yes | Largest loadable dish in lower basket | 35,0 inches |
| Height adjustment of the upper basket | On three levels (5 cm) | | |

| | | | |
|--|-------------|--------------------------------|------|
| Sliding Guides Extra Glide | Yes | Colour Inner Components | Blue |
| Largest loadable dish in upper basket | 18,0 inches | Cutlery basket | Yes |


Technical Features



| | | | |
|-------------------------------|---|--|---|
| Width (mm) | 23 9/16 " | Flood protection system | Total Acquastop |
| Depth (mm) | 22 7/16 " | Max water hardness | 100°FH;58°dH |
| Display type | LED (external) | Drying system | Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle |
| Product Height (mm) | 32 3/16 " | Tub material | Stainless steel |
| Display | Delayed start, Programme time indicator, Time to end indication | Filter | Stainless steel |
| Programme graphics | Symbols | Concealed heating element | Yes |
| On/off indicator | Yes | Hinges | Self balancing with variable hinges |
| Salt light indicator | Light | Min. and max plinth height | 98 - 168 mm |
| Rinse aid indicator | Light | Adjustable feet | 7cm, from 860 to 930 mm |
| Progress indicator | Yes | Additional gaskets | Yes |
| End of cycle indicator | On display, with acoustic signal | Back cover | Yes |
| Washing system | Orbital | Depth of dishwasher with open door (mm) | 1146 |
| Third spray arm | Single | Top cover | Metallic sheet |
| Water softener | With electronic setting | | |

Electrical Connection

| | | | |
|------------------------|-------------------|----------------------------------|--------------|
| Plug | (A) USA e Messico | Frequency (Hz) | 60 Hz |
| Connected power | 1800 W | Type of connection | Single-phase |
| Current | 10 A | Power supply cable length | 140 " |
| Voltage | 110-120 V | | |

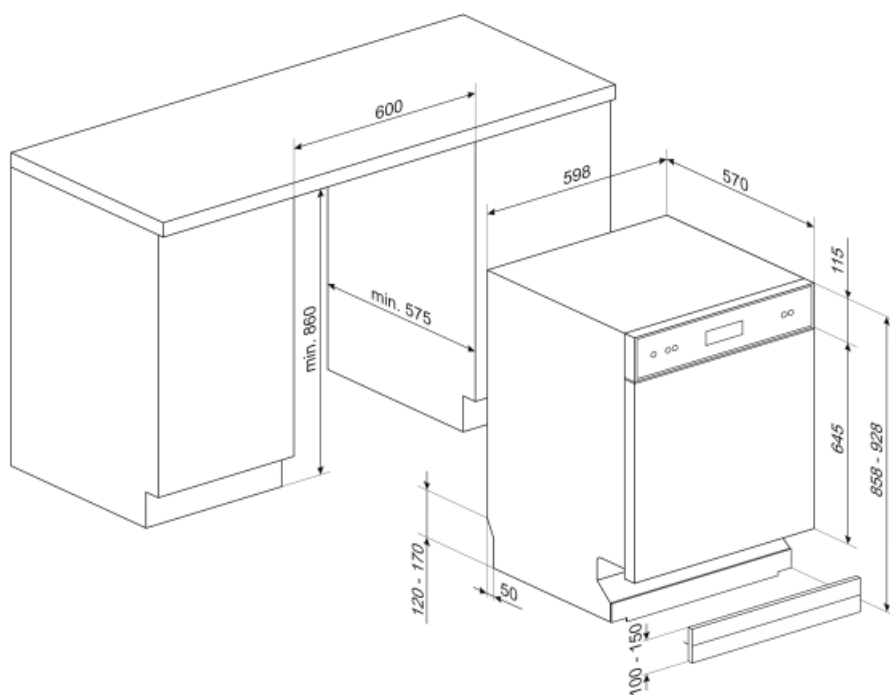

Not included accessories




KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

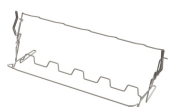

KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITPL60X







 



 








Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary (TT)

| | | | |
|--|--|---|--|
|  | To improve the drying of dishes without leaving stains. |  | 86 cm high |
|  | Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time. |  | LED display: to show programmes, functions and options selected and the time to the end of the cycle. |
|  | The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperature. |  | FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules. |
|  | FlexiZone: The 1/2 load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed. |  | The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket. |
|  | Noise Level: Excellent insulation and special devices keep noise to a minimum. |  | Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash. |
|  | Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled. |  | Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation. |
|  | Soak programme: The soak programme provides a rinse to prevent dirt from drying. |  | Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes. |
|  | 13 place settings: Number of place settings. |  | Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary. |
|  | Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents. |  | Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (|
|  | STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles. | | |