
 




Whirlpool® 31-inch Wide SideKicks® All-Refrigerator with LED Lighting - 18 cu. ft.

WSR57R18DM

Available Finishes/Colours

 WSR57R18DM Monochromatic Stainless Steel	 WSR57R18DH White Ice
---	---

Dimensions		Dispenser	
Depth	31.25	Dispenser Type	N/A
Height	66.75		
Width	30.25		

Specifications	
Country Of Origin	USA
Optional Accessories	SKT60M
Extended Service Plan Parent	EW07IW4Y, EW07IW2Y, EW07IW1Y
Product To Product Pairs	WGG745S0FS, WUW35X24DS, WUW35X15DS
Fingerprint Resistant	No

Electrical	
Amps	15
Volts	115

Controls	
Control Lockout	N/A

You'll have plenty of room to store all your everyday favorites inside this 18 cu. ft. SideKicks® refrigerator. Enjoy a longer-lasting, energy-efficient light on your food with LED lighting. The temperature alarm will notify you if the SideKicks® refrigerator gets too warm. Plus, you can choose the ideal temperature for whatever foods you're storing with electronic temperature controls.

Top Features

LED Interior Lighting

Electronic Temperature Controls

Temperature Alarm

PRODUCT MODEL NUMBERS


WRF57R18D WSR57R18D
WRR56X18F

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

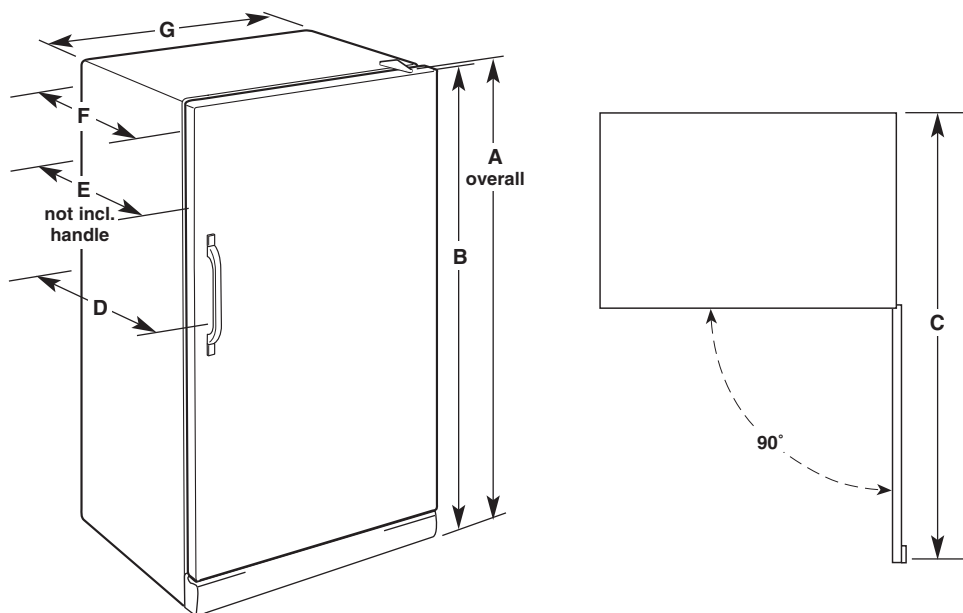

Model Number	Model Size	Door Swing	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ⁷ / ₈ " (141.9 cm)	30" (76.2 cm)	29 ¹ / ₈ " (74 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ³ / ₄ " (141.6 cm)	31 ¹ / ₄ " (79.4 cm)	28 ⁷ / ₈ " (73.3 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)

LOCATION REQUIREMENTS

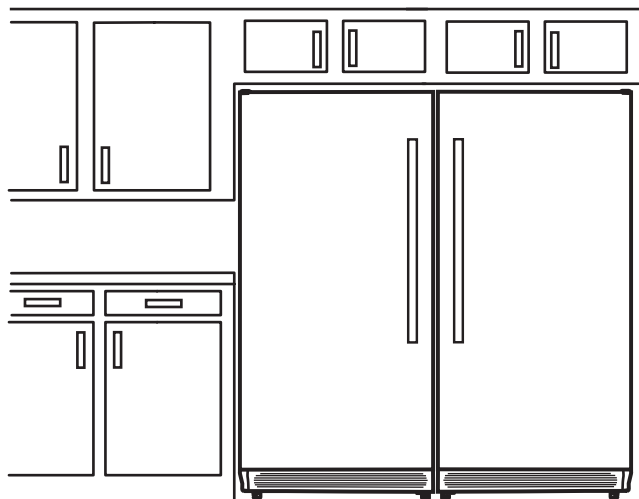

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a 1/4" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasoline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.