

Simplify steps in the cooking process with an electric slide in range that lets you skip preheating for frozen favorites with Frozen Bake™ Technology. Get more flexibility and fast boil times on the cooktop with high wattage FlexHeat™ Dual Radiant Elements. This range is also equipped with a high-temperature, adjustable self clean oven cycle so you can clean without using chemicals.

### **Top Features** Frozen Bake™ technology Two FlexHeat™ Dual Radiant Elements **Adjustable Self-Clean Cycle**

## 4.8 Cu. Ft. Whirlpool® Electric Range with Frozen Bake™ Technology

YWEE515S0LS

#### **Available Finishes/Colours**

YWEE515S0LV Black Stainless	YWEE515S0LW White		
YWEE515S0LB Black		EE515S0LS inless Steel	
Dimensions		Details	
Depth	28.94	Number Of Rack Guides	5
Height	36.0	Oven Cleaning Type	Self-Clean
Width	29.88	Oven Control Type	Tap Touch
		Oven Cooking System	Thermal
Details		Oven Interior Depth In Inches	18.5
Oven Control Location	Front Control		
Bake Element Power	2400W	Oven Interior Width In Inches	24.5
Broiler Element Power	3400W	Oven Light Switch Location	Oven Control
Broiler Location	Top of Oven		
Convection Functions	No	Oven Light Type	Incandescent
Cooktop Surface Material	Glass	Oven Rack Type	Standard (Both)
Hidden Bake Element	No		
Interior Color	Dark Grey	Cooktop Details	
Number Of Oven Lights	1	Right Rear Element Burner Power	1200W
Number Of Oven Racks	2		





# **Front Control Electric Ranges**

#### PRODUCT MODEL NUMBERS

WEC310S0L WEE515S0L WEE515SAL YWEE515S0L

#### **ELECTRICAL CONNECTION**

To properly install your range, you must determine the type of electrical connection you will be using and follow the instructions provided for it here.

- Range must be connected to the proper electrical voltage and frequency as specified on the model/serial/rating plate. The model/ serial/rating plate is located behind the oven door on the top righthand side of the oven frame.
- This range is manufactured with the neutral terminal connected to the cabinet. Use a 3-wire, UL listed, 40- or 50-amp power supply cord (pigtail). See the following Range Rating chart. If local codes do not permit ground through the neutral, use a 4-wire power supply cord rated at 250 volts, 40- or 50-amps and investigated for use with ranges.


Range Rating*		Specified Rating of Power Supply Cord Kit and Circuit Protection
120/240 Volts	120/208 Volts	Amps
8.8 - 16.5 KW	7.8 - 12.5 KW	40 or 50**
16.6 - 22.5 KW	12.6 - 18.5 KW	50

<sup>\*</sup>The NEC calculated load is less than the total connected load listed on the model/serial/rating plate.

■ A circuit breaker is recommended.

### PRODUCT DIMENSIONS

This manual covers several models. Your model may appear different from the models depicted. Dimensions given are maximum dimensions across all models.

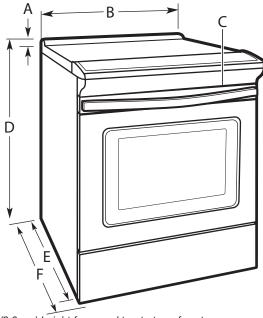

- A. 13/16" (3.0 cm) height from cooktop to top of vent
- B. 297/8" (75.9 cm)
- C. Model/serial/rating plate (located behind the oven door on the top right-hand side of the oven frame)
- D. WEE515SAL: 34" (86.4 cm) height to top of cooktop edge with leveling legs screwed all the way in\*
  Other models: 36" (91.4 cm) height to top of cooktop edge with leveling legs screwed all the way in\*
- E. 28<sup>25</sup>/<sub>64</sub>" (72.1 cm) max. depth from front of console to back of range
- F. 291/64" (73.7 cm) max. depth from handle to back of range

**IMPORTANT:** Range must be level after installation. Follow the instructions in the "Level Range" section of the Owner's Manual. Using the cooktop as a reference for leveling the range is not recommended.

\* Range can be raised approximately 1" (2.5 cm) by adjusting the leveling legs.


<sup>\*\*</sup> If connecting to a 50-amp circuit, use a 50-amp rated cord with kit. For 50-amp rated cord kits, use kits that specify use with a nominal 13/8" (3.5 cm) diameter connection opening.

#### **CABINET DIMENSIONS**

Cabinet opening dimensions shown are for 25" (64.0 cm) countertop depth, 24" (61.0 cm) base cabinet depth and 36" (91.4 cm) countertop height.

**IMPORTANT:** If installing a range hood or microwave hood combination above the range, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface.

Range may be installed next to combustible walls with zero clearance.

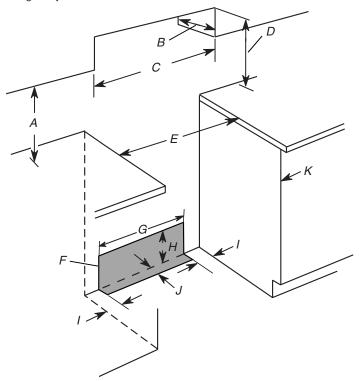

- A. 18" (45.7 cm) upper side cabinet to countertop
- B. 13" (33 cm) max. upper cabinet depth
- C. 30" (76.2 cm) min. opening width
- D. For minimum clearance to top of cooktop, see NOTE\*.
- E. 30" (76.2 cm) min. opening width
- F. The shaded area is recommended for installation of grounded outlet.
- G. 13<sup>1</sup>/<sub>8</sub>" (33.3 cm)
- H. 7<sup>11</sup>/<sub>16</sub>" (19.5 cm)
- I. 4<sup>13</sup>/<sub>16</sub>" (12.2 cm)
- J. 311/16" (9.4 cm)
- K. Cabinet door or hinges should not extend into the cutout.
- \* NOTE: 24" (61.0 cm) minimum when bottom of wood or metal cabinet is shielded by not less than 1/4" (0.64 cm) flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" (0.4 mm) stainless steel, 0.024" (0.6 mm) aluminum or 0.020" (0.5 mm) copper. 30" (76.2 cm) minimum clearance between the top of the cooking platform and the bottom of an uncovered wood or metal cabinet.