

Setup Guide

Téléviseur digital a color con pantalla de cristal líquido

5-073-665-11(1)



EN	Setup Guide
FR	Manuel de configuration
ES	Guía de configuración

Sony Customer Support
U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. 1.800.222.SONY (7669) Canada 1.877.899.SONY (7669)
Please Do Not Return the Product to the Store

Service à la clientèle Sony
Canada :
<https://www.sony.ca/support>
États-Unis :
<https://www.sony.com/tvsupport>
Canada États-Unis
1.877.899.SONY (7669) 1.800.222.SONY (7669)
Ne retournez pas le produit au magasin


Lea este manual antes de usar el producto

Centro de Asistencia de Sony
<https://esupport.sony.com/ES/LA/>
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.


BRAVIA

K-98XR70M2 / 98XR70SM2


1

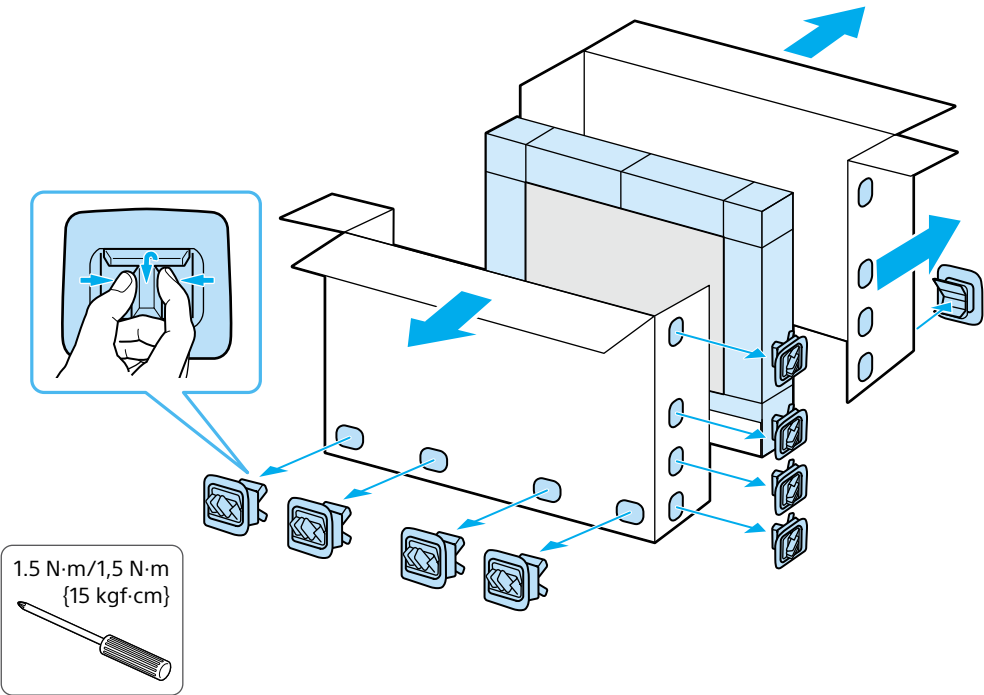


2

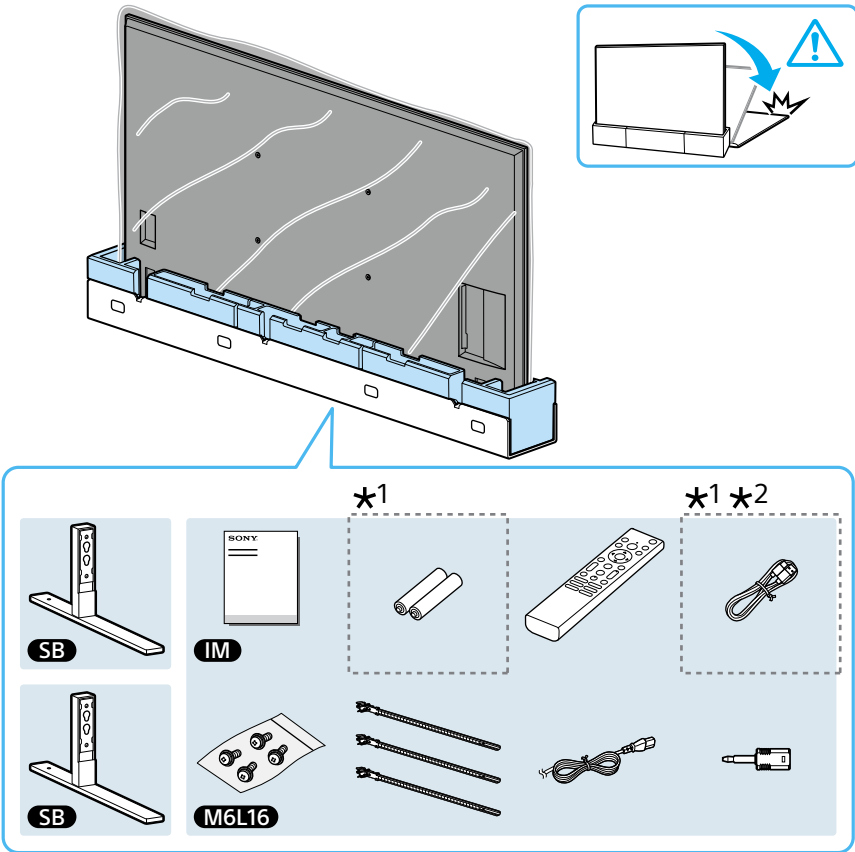


3

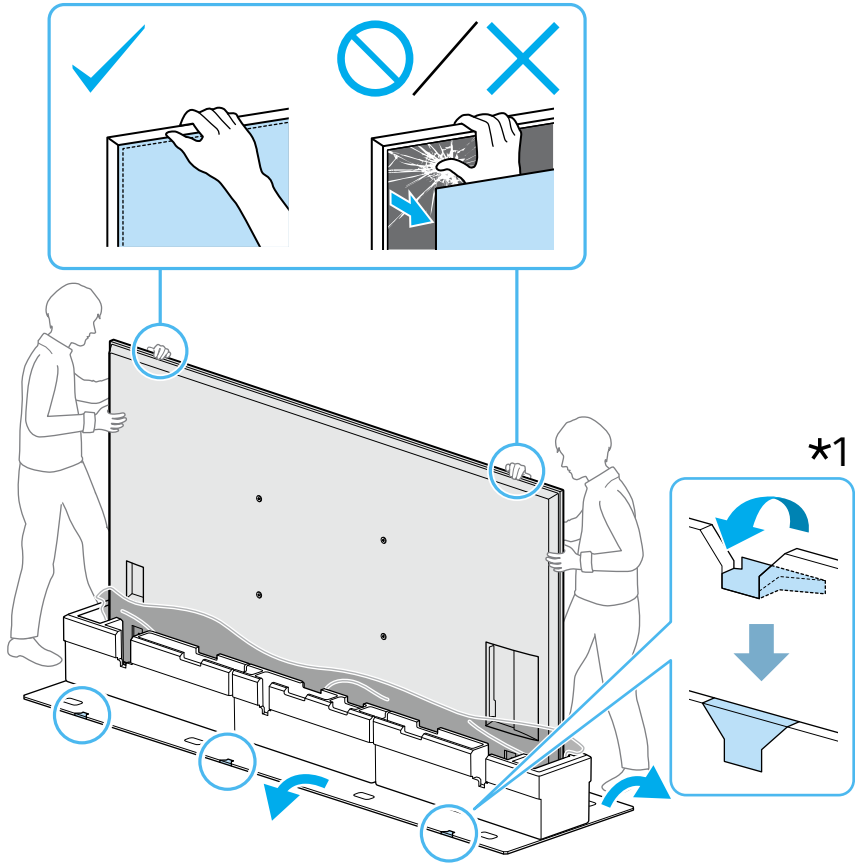


4

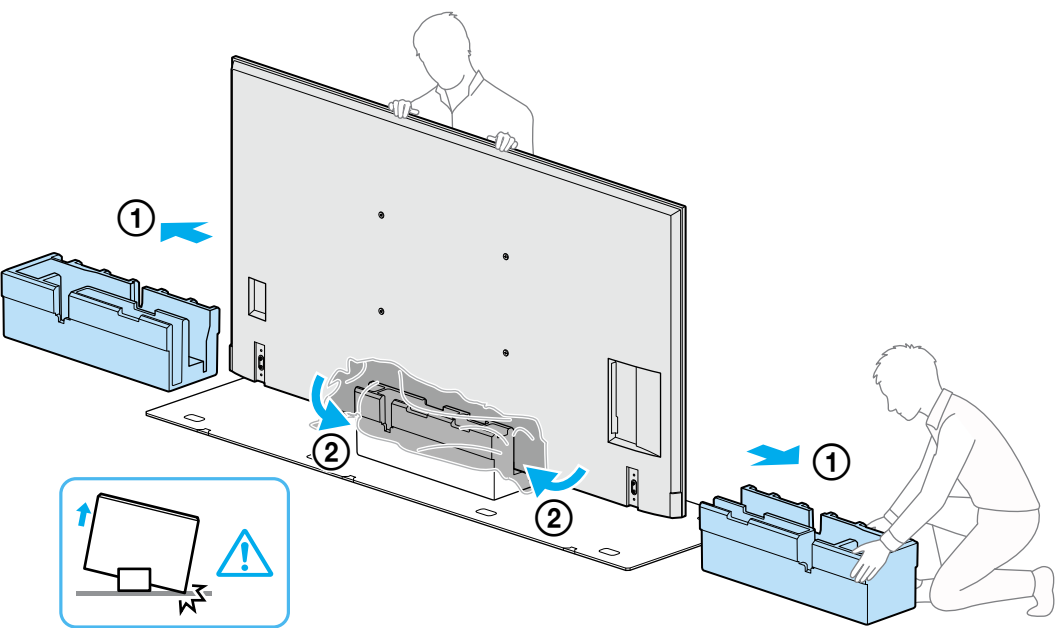

5

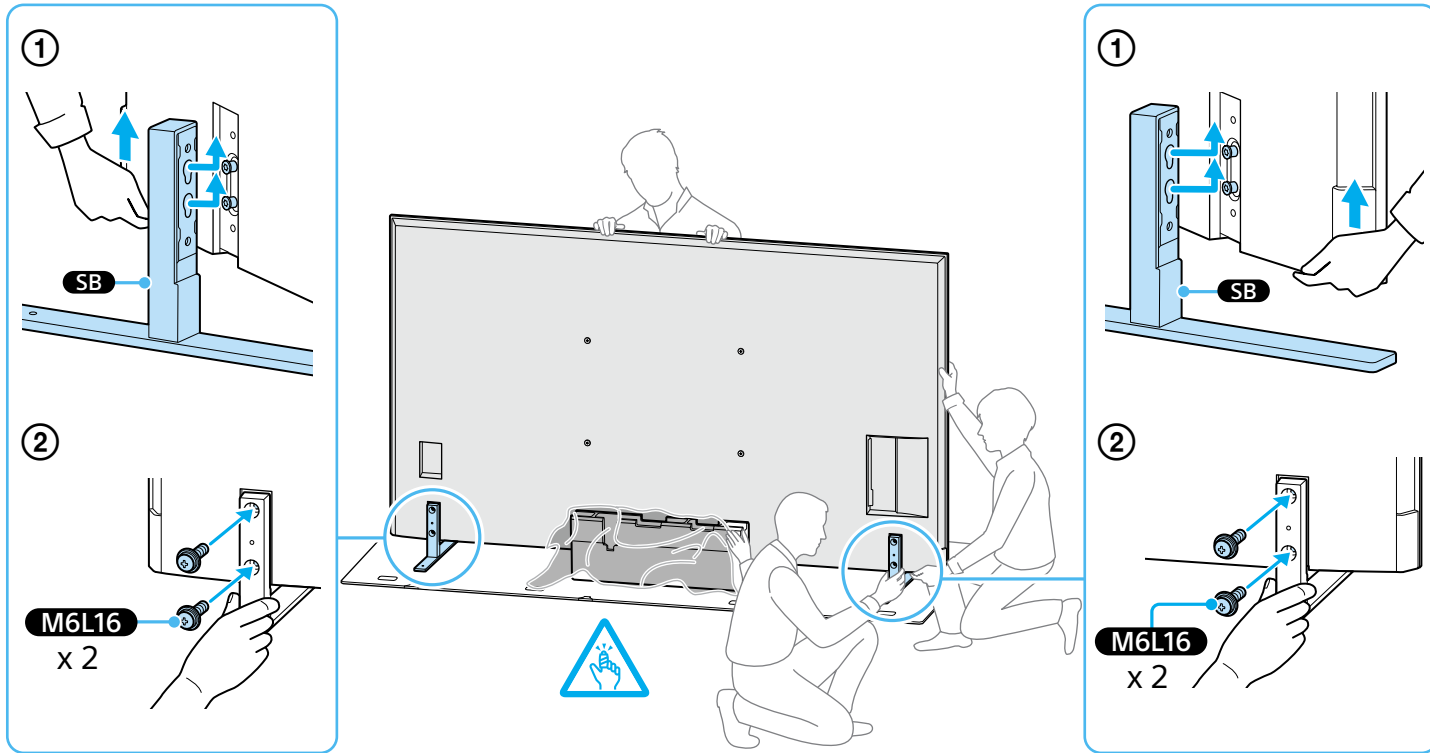

6

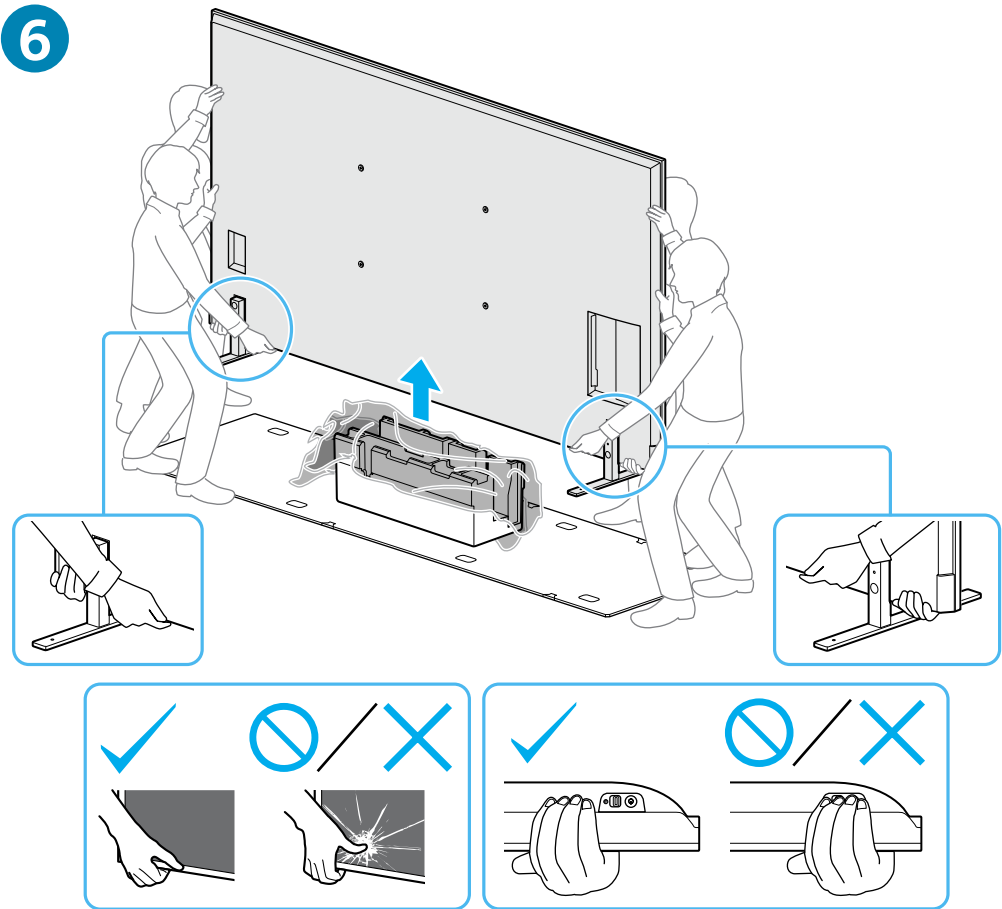


*1 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/países/modelos limitados.


*2 Refer Reference Guide. / Reportez-vous au Manuel de référence. / Consulte la Guía de referencia.




7

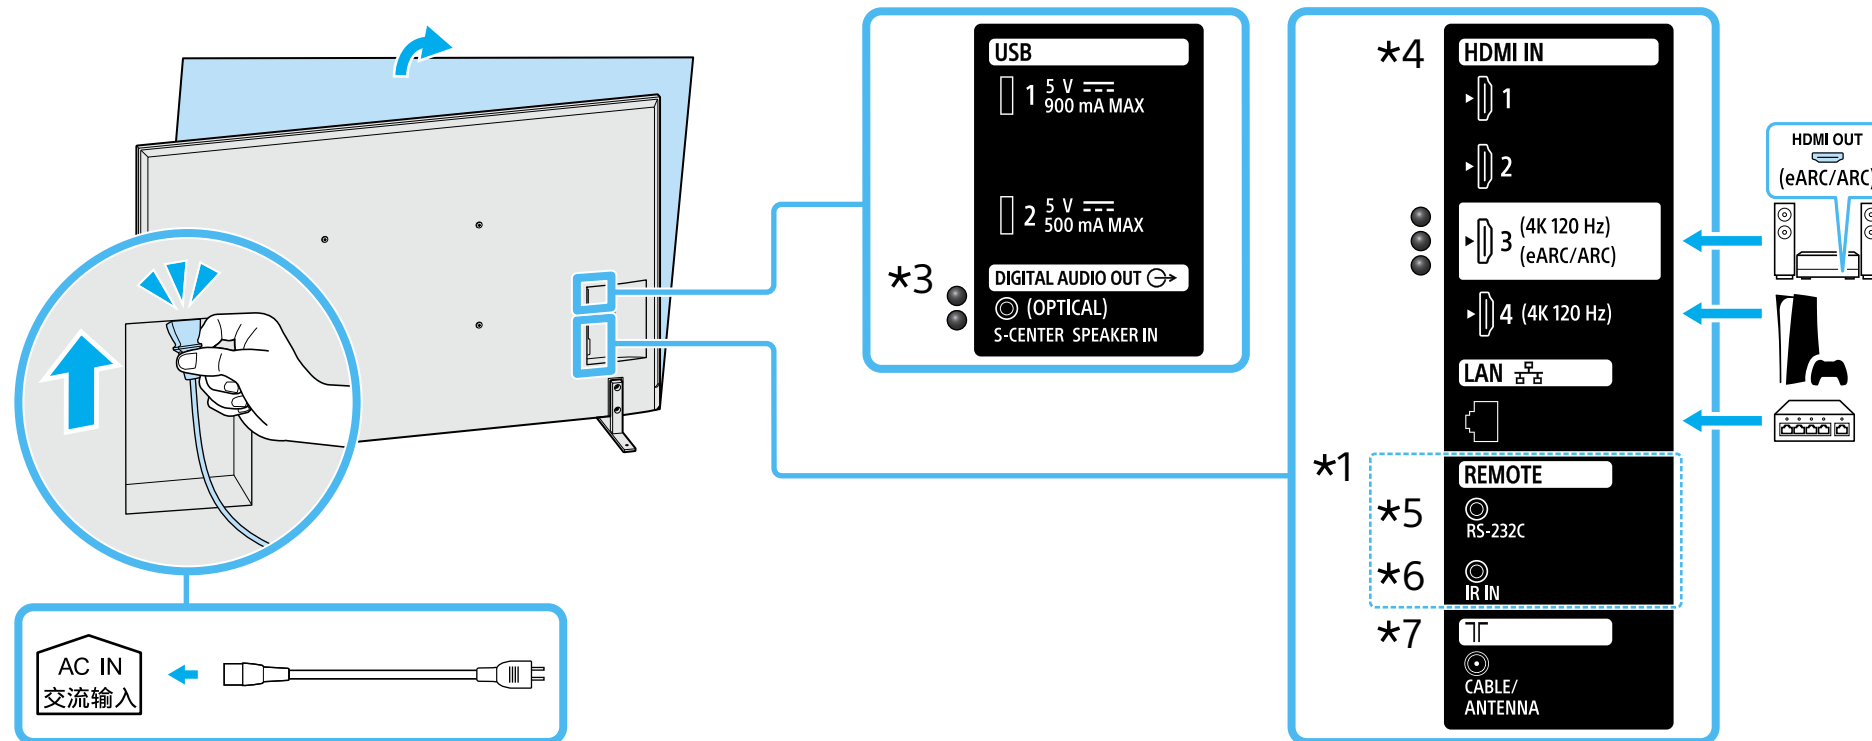




8

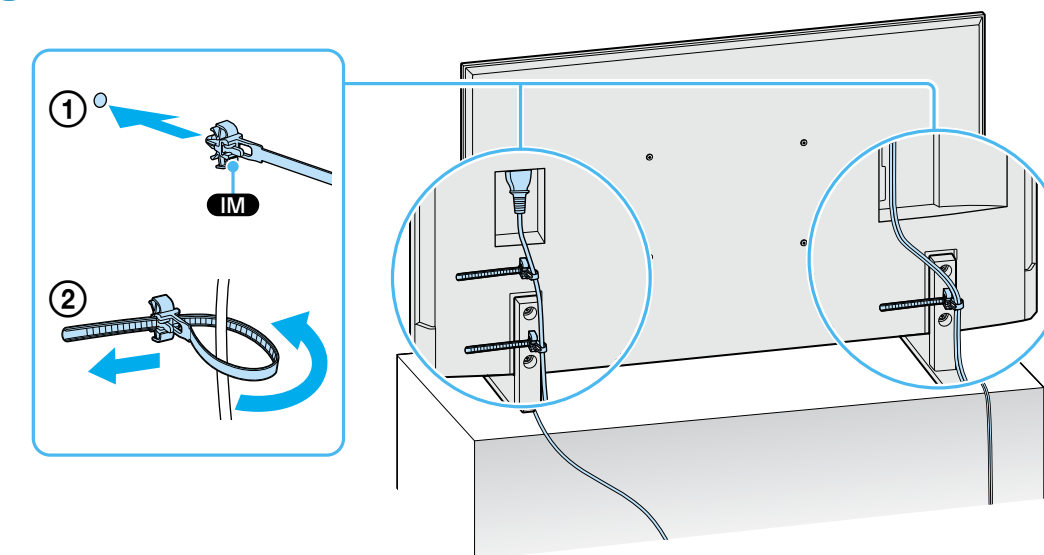


9

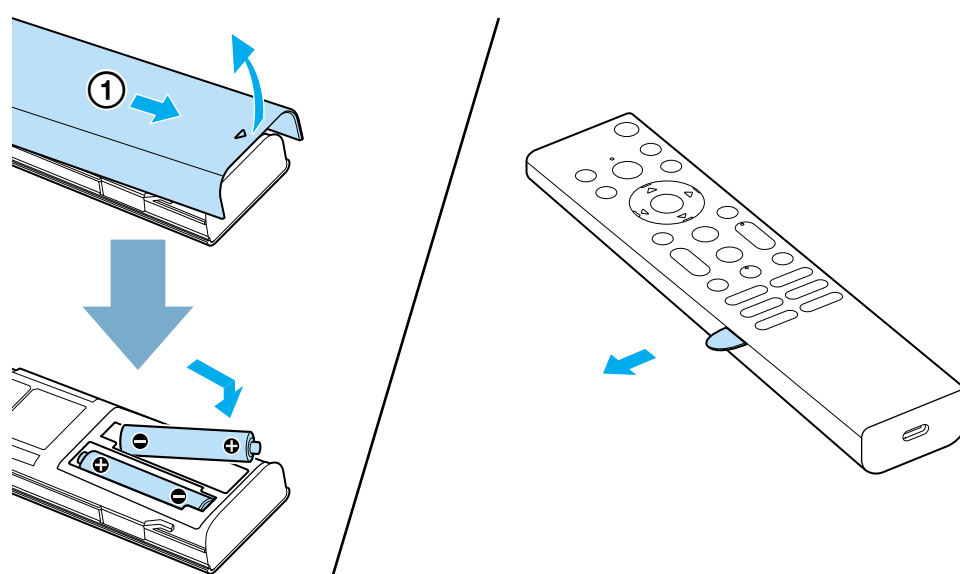


10

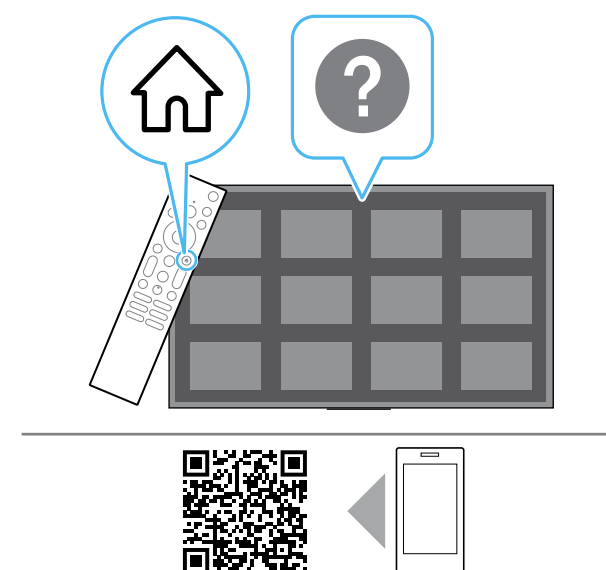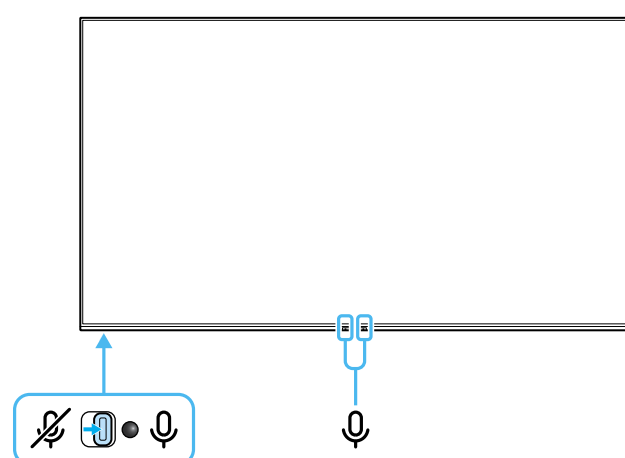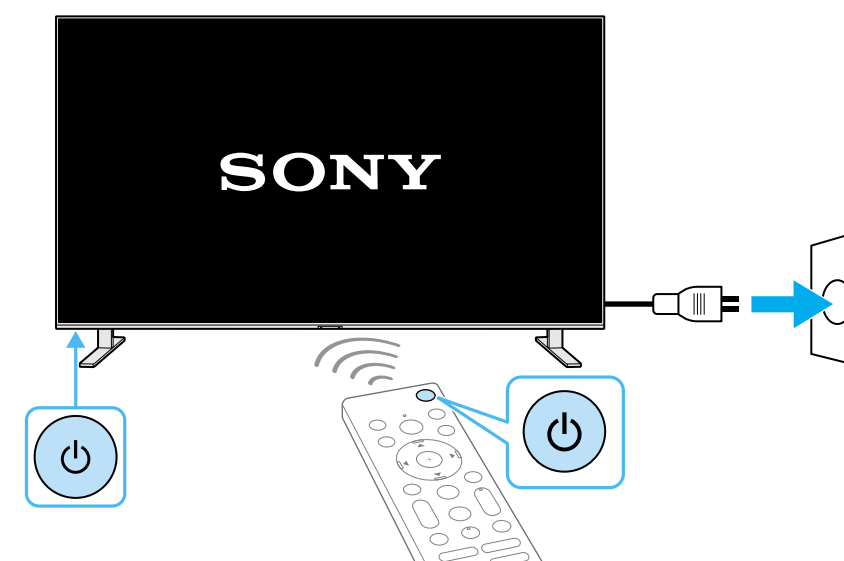


*3

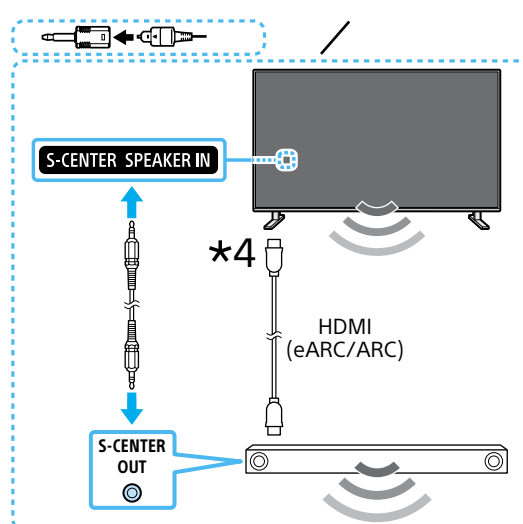


*4

 

*6

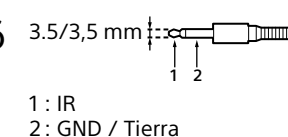

*5

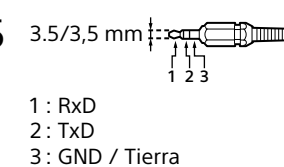

*7

