

T1 Setup Guide


Please read before unpacking.

Pro-Ject

Getting started:

- Make sure to have enough space to unpack your turntable.
- Always unpack and setup in a clean enviroment.
- Important for warranty: Do not throw packaging away.
- Setup is demonstrated with T1 Phono SB.



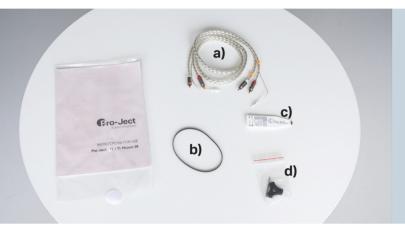

a) Connect it E (RCA cable)

Detachable cable only included with T1 Phono SB & T1 BT

- b) Drive belt
- c) Stylus pressure gauge
- d) Adapter for 7" singles



Remove dust cover carton from the box.

Lift the wrapped turntable out of the box.



 




Unpack the power supply.



Unpack the platter.







Put the platter on the turntable.



Put the felt mat on the platter.



Remove tonearm twist tie.



Connect to your hifi-system and enjoy your music!











T1

Connect to any amp with integrated phono amplifier or use an external phono preamp.

Pre-mounted Connect it E (RCA cable) included. Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject MaiA S2 (stereo integrated amplifier).

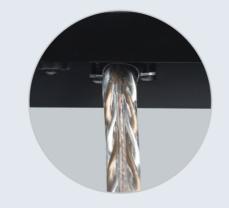

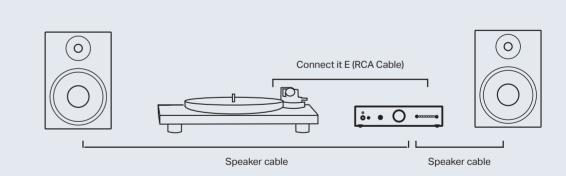


T1 Phono SB

Select Line Out to connect to an amplifier without a phono stage. Select **Phono Out** if you have an amplifier with a phono stage.

Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject Stereo Box S2 (smallest audiophile integrated amp).





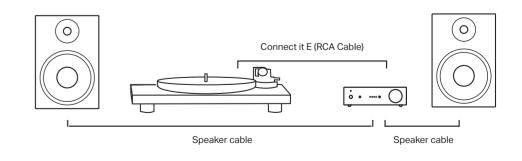

T₁BT

Select **Line Out** to connect to an amplifier without a phono stage. Select Phono Out if you have an amplifier with a phono stage. Enjoy the warmth of vinyl with the comfort of wireless technology.

Possible set: Pro-Ject Speaker Box 5 (bookshelf speaker) and Pro-Ject Stereo Box S2 (smallest audiophile integrated amp).



