

Panasonic


Model No. KX-TGF870C KX-TGF872C

Quick Guide

Connections


Base unit


- (1) Connect the AC adaptor to the unit by pressing the plug firmly.
- 2 Connect the telephone line cord to the unit until you hear a click.
- 3 Fasten the AC adaptor cord and the telephone line cord by hooking it.
- 4 Connect the AC adaptor to the power outlet.
- (5) Connect the telephone line cord to the single-line telephone jack (RJ11C) until you hear a click.
- (6) A DSL/ADSL filter (not supplied) is required if you have a DSL/ADSL service.
- (7) Connect the corded handset cord to the corded handset and the base unit until you hear a click.
- Use only the supplied Panasonic AC adaptor PNLV226.

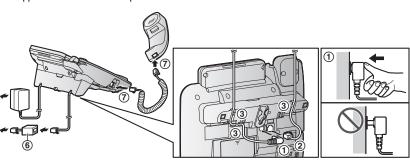

Charger

  ① Connect the AC adaptor to the power outlet.

 





















Charge for about 7 hours.

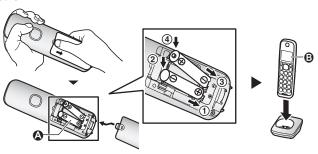


- Note:


 USE ONLY rechargeable Ni-MH batteries AAA (R03) size (♠).

 Do NOT use alkaline/manganese/Ni-Cd batteries.
- Confirm correct polarities (⊕, ⊝).
- Follow the directions on the display to set up the unit.
- Confirm "Charging" is displayed (3).

   
Removing the battery



















Soft keys

By pressing a soft key, you can select the feature shown directly above it on the display. Pay attention to the display to see what functions the soft keys are assigned during operation.

Navigator key

Handset:

- (▲), (▼), (◄), or (►): Scroll through various lists and items.
- VOL. (Volume: [▲] or [▼]): Adjust the receiver or speaker volume while talking.
- [◄] □: View the phonebook entry.
- [▶] REDIAL: View the redial list.
- [▼] CID (Call Display): View the caller list.

Base unit

 
- [▲], [▼], (◄], or [►►]: Scroll through various lists and items.
- VOLUME ((▲) or (▼)): Adjust the receiver or speaker volume while talking.
- [I◄]/[►►I]: Repeat/skip messages during playback.

 
Handset





Base unit







- 1 [MENU]#101
- 2 Enter the current month, date, and year. → [OK]
- 3 Enter the current hour and minute (12-hour clock format).
- 4 Proceed with the operation for your unit.

 
Handset: $[SAVE] \rightarrow [OFF]$ Base unit: $[SAVE] \rightarrow [EXIT]$

Recording your greeting message of the answering system (Handset/Base unit)

 
You can record your own greeting message instead of using a pre-recorded greeting message.

- 1 [MENU]#302 \rightarrow [\$]: "Yes" \rightarrow [SELECT]
- 2 After a beep sounds, speak clearly about 20 cm (8 inches) away from the microphone (2 minutes max.).
- 3 Press [STOP] to stop recording.
- 4 Proceed with the operation for your unit.

Handset: [OFF]
Base unit: [EXIT]














Basic operations Making/Answering calls (Handset/Base unit) Making calls **Handset:** Dial the phone number. \rightarrow [$\$]/[$\$] **Base unit:** Dial the phone number. → Lift the corded handset, or press Handset: [>>]/[□ ←] Answering calls Base unit: Lift the corded handset, or press [♣]. To hang up Handset: [OFF] Base unit: Place the corded handset on the cradle. When the speakerphone is used, press [♣]. To adjust the receiver or speaker volume Press (▲) or (▼) repeatedly while talking. Making a call using the redial list [\blacktriangleright] REDIAL \rightarrow [\updownarrow]: Select the desired entry. \rightarrow [\blacktriangleright]/[\clubsuit] Base unit: **(REDIAL)** \rightarrow (\updownarrow): Select the desired entry. \rightarrow Lift the corded handset, or press [♣]. To adjust the ringer volume Press [▲] or [▼] repeatedly to select the desired volume while ringing. Phonebook (Handset/Base unit) **1** Proceed with the operation for your unit. Adding entries Handset: $[\blacktriangleleft] \coprod \rightarrow [MENU]$ Base unit: $(\square) \rightarrow (MENU)$ 2 (♣): "Add new entry" → [SELECT] 3 Enter the party's name (16 characters max.). → [OK] **4** Enter the party's phone number (24 digits max.). → **[OK] 5** [♣]: Select the desired group. → [SELECT] 2 times 6 Proceed with the operation for your unit. Handset: [OFF] Base unit: [EXIT] 1 Proceed with the operation for your unit. Making calls Handset: [◄] □ Base unit: [III] 2 (\$): Select the desired entry. **3** Proceed with the operation for your unit. Handset: [>] Base unit: Lift the corded handset. Answering system (Base unit)

 


Answering on/off

Listening to messages

 Answering system (Handset)
Listening to messages





To listen to new messages: [PLAY] or [MENU]#323
To listen to all messages: [MENU]#324

[▶■] (PLAY)

Press [ANSWER ON/OFF] to turn on/off the answering system.





 




 
Frequently asked questions Question Cause/solution Why is **Y** displayed? • The handset is too far from the base unit. Move closer. • The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. • The handset is not registered to the base unit. Register it. 1 Handset: [MENU]#130 2 Base unit: Press and hold [LOCATOR] for about 5 seconds. 3 Handset: Press [OK], then wait until a long beep sounds. • Press the volume key [\(\) repeatedly while talking. How can I increase the handset volume level? Why is the conversation noisy or • Try to relocate the base unit so that distance to the handset is minimized. cutting off? • If the same problem occurs even if the handset is next to the base unit, contact an authorized service centre. Can I add another accessory handset • Yes, you can add up to 6 handsets (including the handset(s) sold with your to my base unit? base unit) to a single base unit. Can I keep the batteries charging all • You can leave the handset on the charger anytime. This will not harm the the time? • Press [CALL WAIT] when you hear the call waiting tone. How can I answer a call waiting call (2nd call)?

 




 




 


 












Panasonic

KX-TGF872C Modèle KX-TGF870C

entendre un clic.

- ① Brancher l'adaptateur secteur à l'appareil en appuyant solidement sur la fiche.
- 3 Fixer le cordon de l'adaptateur secteur et le cordon de ligne téléphonique à l'aide des attaches prévues. ② Brancher le cordon de ligne téléphonique à l'appareil jusqu'à entendre un clic.

4 Brancher l'adaptateur secteur sur la prise de courant.

Poste de base

Raccordements

 






Tarancher le cordon du combiné câblé au combiné câblé et au poste de base jusqu'à entendre un clic. $\textcircled{6} \ \ \mathsf{DNL}^{\mathsf{ADSL}} \ \text{on resonance adoannet} \ \mathsf{ast} \ \mathsf{requis} \ \mathsf{pour} \ \mathsf{les} \ \mathsf{abonnés} \ \mathsf{\hat{a}} \ \mathsf{un} \ \mathsf{service} \ \mathsf{DSL}^{\mathsf{ADSL}}.$

(3) Brancher le cordon de ligne téléphonique à l'appareil et s la prise téléphonique à ligne simple (CLLA) jusqu's




① Brancher l'adaptateur secteur sur la prise de courant.



9 □**≁[]+**0**→**G

 Imprimé en Malaisie

 















Mise en place/Recharge des piles

Charger pendant environ 7 heures.




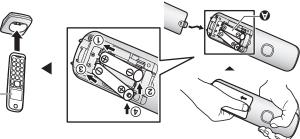

- Nots:

 UTILISER SEULEMENT des piles rechargeables Ni-MH de format AAA (R03) (♠).
- \bullet Ne PAS utiliser de piles alcalines, au manganèse ou au nickel-cadmium.
- Confirmer la polarité (⊕, ⊖).
- Suivre les directives affichées pour configurer l'appareil.
- ullet Vérifier que "Charge" est affiché ($oldsymbol{f G}$).

  
Retrait des piles



 


 




 












Poste de base : [SAUV.] \rightarrow [EXIT] Combiné : [SAUV.] → [OFF]

- 3 Entrer l'heure et les minutes (système de 24 heures).
 - 2 Entrer le jour, le mois et l'année. → [OK]
 - 1 (MENU)#101

Date et heure (Combiné/Poste de base)

Poste de base : [SVUAS] → EXIT] Combiné : [SAUV.] \rightarrow [OFF]

- 2 Effectuer la procédure selon l'appareil
- $\mathbf{1} \; (\mathbf{MENU}) \# \mathbf{11} \mathbf{2} \to (\mathbf{1}^*) : \text{`Français''}$


Langue de l'annonce vocale

Poste de base : [SAUV.] \rightarrow [EXIT] Combiné : [SAUV.] \rightarrow [OFF]

- 2 Effectuer la procédure selon l'appareil.
- $| \text{WENU} | \text{MINO} \rightarrow [\updownarrow]$

Langue d'affichage

 Choix de la langue (Combiné/Poste de base) (par défaut : "English")



INTERCOM MENU









Poste de base Combiné

- [⊷]/[►►] : Pour reprendre/sauter des messages durant la lecture.
- VOLUME ((▲) ou (▼)): Pour régler le volume du récepteur ou du haut-parleur pendant la conversation.
 - [▲], [♠], ou [▶] : Pour défiler parmi diverses listes et rubriques.
 - [v] CID (Affichage du demandeur) : Pour consulter la liste des demandeurs.
 - [►] REDIAL : Pour afficher la liste de recomposition.
 - [◄] □ : Pour consulter une inscription du répertoire.
- VOL. (Volume [▲] ou [▼]) : Pour régler le volume du récepteur ou du haut-parleur pendant la conversation.
 - [▲], [▼], [▼], [◆] bour défiler parmi diverses listes et rubriques.

Touche de navigation

 
Lors de l'utilisation de l'appareil, consulter l'affichage pour connaître les fonctions assignées aux touches de fonction. En pressant l'une de ces touches, il est possible de sélectionner la fonction indiquée directement au-dessus de la touche. Touches de fonction





















Vous pouvez enregistrer votre propre message réponse au lieu d'utiliser un message réponse préenregistré.

- 1 [MENU]#302 \rightarrow [\$]: " $o_{u\bar{1}}$ " \rightarrow [SÉLECT.]
 2 Après le bip, énoncer clairement le message 20 cm (8 pouces) du microphone (durée maximale de 2 minutes).
- 3 Appuyer sur [ARRÊT] pour mettre fin à l'enregistrement.
- 4 Effectuer la procédure selon l'appareil.

Combiné : [OFF]

Poste de base : [EXIT]

 -,d/,-:-d-:0/	-,,	-,,	0,0000	1
	aena a	n elloli	ALIA I	Į

 2 (\$\displays \cdot \infty \cdot \inft				
Poste de base : [[]]				
Combiné : [◆] : ènidmo⊃				
1 Effectuer la procédure selon l'appareil.	Pour faire des appels			
Combiné : [OFF] Poste de base : [EXIT]				
6 Effectuer la procédure selon l'appareil.				
5 [\$]: Sélectionner le groupe désiré. → [SÉLECT.] 2 fois				
→ [ok]				
4 Entrer le numéro de téléphone du correspondant (max. de 24 chiffres).				
3 Entrer le nom du correspondant (max. de 16 caractères). → [OK]				
2 [♣] "Ajout au répertoire" → [SÉLECT.]				
Poste de base : [□] → [MENU]				
Effectuer Is procédure selon l'appareil. Combiné : [◄] ☐ → [MENU]	Pour ajouter des inscriptions			
lisasagas'i golog garibàggag al agridoth	Répertoire (Combiné/Poste de base)			
לתמנות ומ פסווויסווס פס ומוג סווגיסוומיס:	(0004 01 04000), saidame 2), saidame 2,4			
Appuyer à répétition sur [▲] ou [▼] pour sélectionner le volume désiré quand la sonnerie se fait entendre.	Pour régler le volume de la sonnerie			
(REDIAL) → [‡]: Sélectionner l'inscription désirée. → Décrocher le combiné câblé, ou appuyer sur [æ].				
Poste de base :				
[▶] REDIAL → [♣]: Sélectionner l'inscription désirée. → [♠]/[嵊]	unméros composés			
Combiné:	Pour recomposer à partir de la liste des			
	bsujeni.			
Pendant la conversation, appuyer à répétition sur [▲] ou [▼].	Pour régler le volume du récepteur/haut-			
de la fonction mains libres, appuyer sur [岭].				
Poste de base : Poser le combiné câblé sur son socle. Lors de l'utilisation				
CPF] (OFF)	Pour couper la communication			
Poste de base : Décrocher le combiné câblé, ou appuyer sur [æ].				
Combiné : [<i>▽</i>]/[<i>▽</i>]	Pour recevoir des appels			
combiné câblé, ou appuyer sur [岭].				
Poste de base : Composer un numéro de téléphone. → Décrocher le				
Combiné : Composer un numéro de téléphone. $ ightarrow$ [$ ightarrow$]/[$ ightarrow$]	Pour faire des appels			
Appels entrants et sortants (Combine/Poste de base)				





 








Poste de base : Décrocher le combiné câblé.





Combiné: [🖍]





Comment prendre un appel en attente (deuxième appel)?				
Est-il possible de recharger continuellement les piles?				
Est-il possible d'ajouter un autre combiné supplémentaire à mon poste de base?				
bruyante ou coupée?				
volume du combiné?				
,				
Question				
Foire aux questions				
Pour faire l'écoute des messages				
Répondeur (Combiné)				
Pour faire l'écoute des messages				
Pour activer/désactiver le répondeur				
Répondeur (Poste de base)				

