

GETTING Started

WITH YOUR FRIGIDAIRE UPRIGHT 20 CU FT FREEZER



BEFORE YOU START



Set up your freezer

Prior to using the freezer, make sure it is located on a floor that is level and strong enough to support it fully loaded. Check out **INSTALLATION** in your Use & Care Guide to see how to set the anti-tip bracket.



Before operating for the first time

Clean the inside of your appliance before using it. See the **CARE AND CLEANING** section in your Use & Care Guide.

 
 
YOU'RE IN CONTROL



Set your freezer temperature

It's easy! When first turning your appliance on, adjust to **Recommended**. Some models have a power indicator light projected on the floor. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food. If necessary, we recommend you adjust the temperature gradually, in small increments, allowing the temperature to stabilize.

1. Adjusting the appliance temperature control to **OFF** turns off the compressor and prevents the appliance from cooling but does not disconnect the power to the light bulb and other electrical components. To turn off power to your appliance, you must unplug the power cord from the wall outlet.
2. For warmer temperatures, adjust the setting to **Cold**. For colder temperatures, adjust the setting to **Coldest**.
3. The control can be left at the factory preset (**Recommended**) or adjusted as desired.
4. If the temperature inside the cabinet increases, the red **High Temp*** light will illuminate and the alarm will sound.
5. The **Freeze Boost*** mode quickly drives the appliance to a colder temperature and stays active for up to 24 hours before automatically deactivating or being manually exited.
6. Pressing the **Temp*** button will allow you to scroll through the five temperature settings from **Cold** (top) to **Coldest** (bottom), and then loop back to **Cold**.

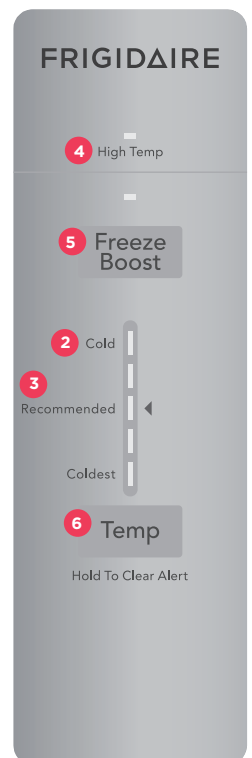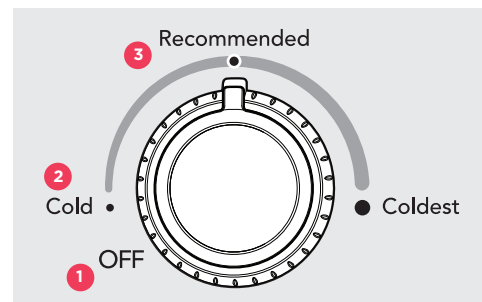

*Refer to your Use & Care Guide for detailed information.

QUICK CARE



 
A little love goes a long way

Wipe up any spills immediately and clean the freezer and appliance compartments at least twice a year.



Easy-to-Clean, Smooth Exterior

Our smooth exterior finish wipes down more easily than traditional textured finishes.

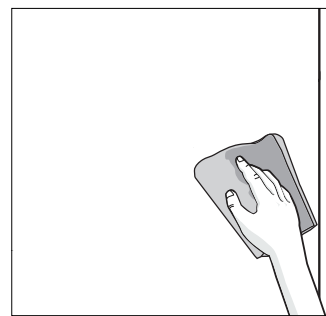

FAQs

What does the alarm or “buzzer sound” mean?

If the temperature inside the cabinet gets warmer, the **High Temp** alert will sound. It's best to make sure your freezer is on a level surface, and the door closes freely and with a proper seal. Once you close the freezer door, leave it closed so the freezer temperature can decrease. If this does not correct the issue, check your Use & Care Guide for information on how to reset the alarm.

The freezer temperature is warmer than preferred. What's wrong?

If the freezer temperature is warmer than you'd like, adjust the control to a colder setting until the freezer temperature is satisfactory. Allow 24 hours for the temperature to stabilize.

Why does my freezer make noise or vibrate?

If your freezer is vibrating or rattling, check the below:

1. *Install the appliance on a floor that is level and strong enough to support a fully loaded appliance. Adjust the anti-tip bracket. See “**Setting the anti-tip bracket**” in the **INSTALLATION** section of your Use & Care Guide.*
2. *Check to see if the freezer is touching the wall. If so, move it slightly.*
3. *Remove any items that are on top of the freezer.*
4. *Check items inside the freezer. It is normal for items inside the freezer to vibrate somewhat. If it seems they're vibrating too much, try moving the freezer slightly.*



Find more troubleshooting tips in the back of your Use & Care Guide.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your upright freezer.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here
FOR YOU



Have a question? Want help? Need service?

frigidaire.com/1 (800) 374-4432

frigidaire.ca/1 (800) 265-8352

owner support

