



Dishwasher / Lave-vaisselle

Installation Manual / Manuel d'installation

Top Control Fully Integrated 24" F8642FI

Top Control Built-Under Stainless Steel 24" F8642SS

To prevent accidents, which could cause serious injury or death, as well as machine damage read these instructions before installation and / or use.

Contents

1. IMPORTANT SAFETY INSTRUCTIONS	1
2. TOOLS WHICH MAY BE NEEDED	4
3. MATERIALS WHICH MAY BE NEEDED	4
4. MATERIALS SUPPLIED	5
4.1 PARTS SUPPLIED	5
4.2 MANUAL BAG	5
4.3 DISHWASHER PARTS BAG 1	5
4.4 DISHWASHER PARTS BAG 2	5
4.5 DISHWASHER PARTS BAG 3	5
4.6 DISHWASHER PARTS BAG 4	5
4.7 DISHWASHER PARTS BAG 5	5
5. DISHWASHER SPECIFICATIONS	6
5.1 TECHNICAL FEATURES	6
6. ENCLOSURE PREPARATION	7
6.1 ELECTRICAL PREPARATION	7
6.2 PREPARATION FOR INSTALLING MOUNTING BRACKETS	7
6.3 ADJUSTING HEIGHT	8
6.4 PREPARING THE WATER CONNECTION	9
6.5 STEAM PROTECTION FOIL	10
7. PLACEMENT OF DISHWASHER INTO THE OPENING	11
7.1 DRAIN HOSE CONNECTION, WATER SUPPLY & ELECTRICAL CONNECTIONS	11
7.2 ADJUSTING THE MOVABLE TOE KICK	14
8. INSTALLER CHECKLIST	18
9. FINAL INSTRUCTIONS	18
10. SELF HELP HINTS:	18

INTRODUCTION

When using the dishwasher, carefully follow precautions in this instruction, manual especially the safety instructions. These are provided in order to save you, time and effort and help to ensure optimum dishwasher performance. Be sure to observe all listed warnings and cautions. Look particularly for the icons with exclamation marks inside. The information icon will also provide important references.



WARNING:

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION:

Indicates a potentially hazardous situation which, if not avoided, may result in injury. It may also be used to alert against unsafe practices.

Notice:

Indicates a potentially hazardous situation which, if not avoided, may result in damage to the dishwasher, the table-ware, the equipment or the environment.

1. IMPORTANT SAFETY INSTRUCTIONS

- In addition to these instructions, the dishwasher shall be installed:
- * In accordance with all local codes or, in absence of a local code,
 - * In the United States, with the National Electric Code,
 - * In Canada, with the Canadian Electric Code C22.1-latest edition/Provincial and Municipal codes and/or local codes.



Read these installation instructions completely before installing and follow them carefully. Save these installation instructions and pass them on to any future user.



When installing the dishwasher, follow basic precautions, including the following:

•Installation and repair should be performed by a qualified installer. Work by unqualified persons could be dangerous and may void the warranty.

Notice

The dishwasher should be installed by an insured licensed plumber, contractor or trained installer. Installation performed by persons other than this could result in improper installation and property damage.

•Do not operate the appliance if damaged, malfunctioning, partially disassembled or if it has missing or broken parts.

•Also follow the safety instructions of the user manual.

•To reduce the risk of electric shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation.

•Only connect the dishwasher to the power supply when all installation and plumbing work is complete.

•If the dishwasher is installed in a location that experiences freezing temperatures (e.g. in a vacation home, cabin, etc.), you must drain all the water from the dishwasher's interior. Water system ruptures that occur as a result of freezing are not covered by warranty.

•Dishwasher must be secured to adjacent cabinetry using the brackets provided. Failure to do this may cause damage to property or bodily injury.

Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload. The dishwasher is designed for an electrical supply of 120 V (volts), 60 Hz (hertz), AC, connected to a dishwasher-dedicated, properly grounded electrical circuit with a fuse or breakers rated for 15 amperes. Electrical supply conductors shall be a minimum of # 16 AWG copper wire rated at 75 °C (167 °F) or higher. These requirements must be met to prevent injury and machine damage. Consult a qualified electrician if in doubt.

•This Dishwasher includes heating element. Do not touch the heating element during or immediately after use.

•Do not use any extension cord or portable outlet device to connect the dishwasher to a power supply.


•Ensure that any plastic wrappings, bags, small pieces etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!

- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it. Ensure that the appliance presents no danger to children while being stored for disposal.
- Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Notice
--


- The dishwasher drain hose must be installed with a drain loop at least 28" (710mm) off the cabinet floor; otherwise the dishwasher may not drain properly.
- This dishwasher is intended for residential use only, and should not be used in commercial establishments.
- New installation - If the dishwasher is a new installation, most of the work must be done before the dishwasher is moved into place.
- Replacement - If the dishwasher is replacing another dishwasher, check the existing dishwasher connections for compatibility with the new dishwasher, and replace parts as necessary.

2. TOOLS WHICH MAY BE NEEDED

		
Pipe Wrench	Wire Cutter	Drill
		
Hole Saw	Hammer	Wire Stripper
		
Tape Measure	Torx Screwdriver	Phillips Screwdriver
		
Adjustable Wrench	Slot Screwdriver	Scissors
		
Level	Brush	Pencil


3. MATERIALS WHICH MAY BE NEEDED

(Additional materials may be required to comply with local codes)

	Hot Water Supply Line - Minimum 3/4" O.D. copper tubing or metal braided dishwasher supply line.
	UL listed conduit connector or strain relief.
	Teflon tape or other pipe thread compound to seal plumbing connections.
	Shut-off valve and fittings appropriate for hot water supply line (copper tubing/compression fitting, or braided hose).
	Silicone
	Glue

4. MATERIALS SUPPLIED

4.1 PARTS SUPPLIED

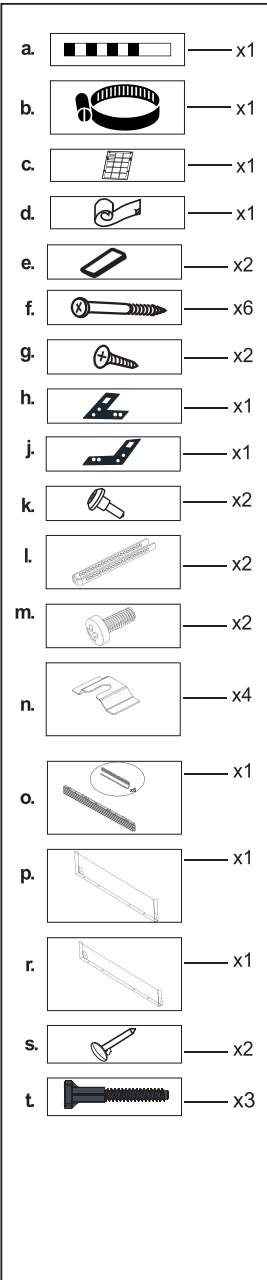

Manual Bag

The dishwasher comes with a manual bag containing the User Manual and the Installation Instructions.

Dishwasher Parts Bag 1

This dishwasher bag comes with the following parts:

- a) Test strip (Select Models)
- b) Hose clamp

Dishwasher Parts Bag 2

- c) Mounting plan
- d) Steam protection foil
- e) Wooden door fixing strips

Dishwasher Parts Bag 3

- f) Screws 5/32" x 53/32" (4mm x 42mm)
- g) Screws 5/32" x 19/32" (4mm x 15mm)
- h) Mounting bracket left
- j) Mounting bracket right
- k) Screws 5/32" x 27/32" (4mm x 21.5mm)

Dishwasher Parts Bag 4

(SELECT MODELS)


- l) Toe kick bracket
- m) Screws 5/32" x 7/32" (4mm x 6mm)
- n) Plinth fixing metal
- o) Adjustable plinth
- p) Adjustable plinth metal (130mm) (Select Models)
- r) Adjustable plinth metal (80mm) (Select Models)
- s) Plinth locking

Dishwasher Parts Bag 5

(SELECT MODELS)

- t) Long legs

5. DISHWASHER SPECIFICATIONS

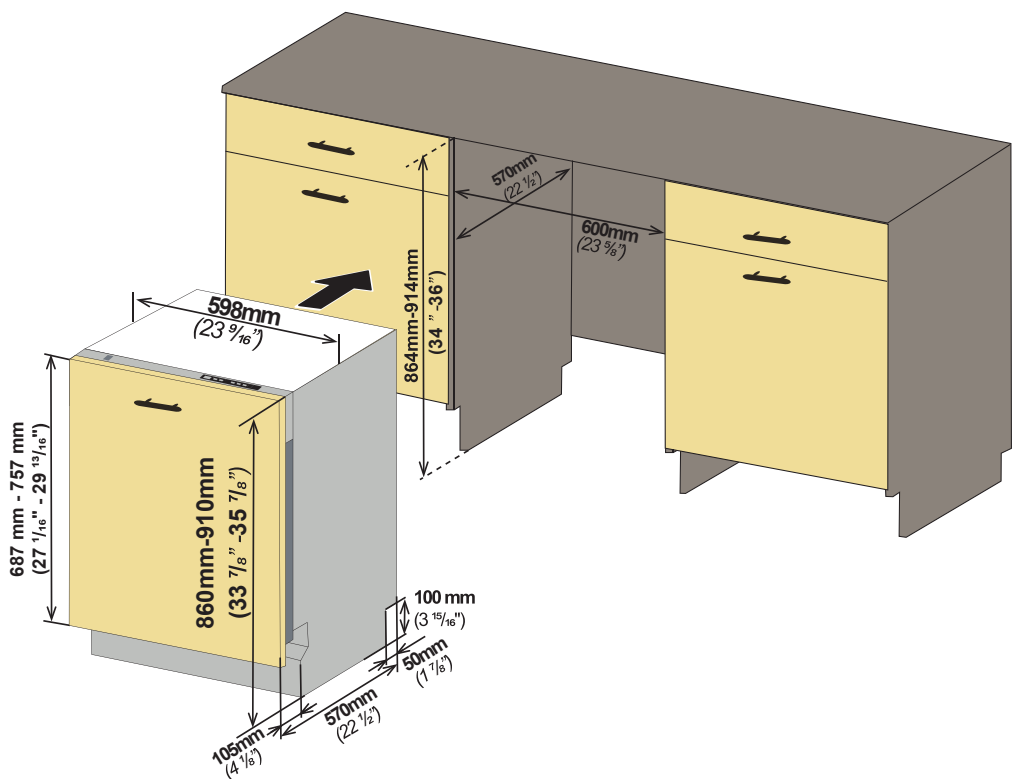

5.1 TECHNICAL FEATURES

Load capacity	15 place settings
Permissible water pressure	4.35 - 145 psi (0.3 - 10 bars)
Electrical connection	120 V (volts), 12 A (amps), 60Hz (hertz)
Total power	1400 W (watts)
Heater power	1100 W (watts)

[i] Notice :

Because we continually strive to improve our products, we may change our specifications and design without prior notice.
This device corresponds to the following directives:
UL 749 Household Dishwasher directive.

6. ENCLOSURE PREPARATION

6.1 ELECTRICAL PREPARATION

WARNING

The dishwasher is designed for an electrical supply of 120 V, 60 Hz, AC, connected to a dishwasher-dedicated, properly grounded electrical circuit with a fuse or breaker rated for 15 amperes.

- The power-supply receptacle for the appliance shall be installed in a cabinet or on a wall adjacent to the under counter space in which the appliance is to be installed.

6.2 PREPARATION FOR INSTALLING MOUNTING BRACKETS

WARNING


The mounting brackets in the plastic bag should be used when the dishwasher is installed in the cabinetry. Use of any parts other than mounting brackets may result in damage to property or bodily injury.

Notice




There shall be an opening through the partition between the compartments that is large enough for the attachment plug to pass through. The longest dimension of the opening shall not be more than 38.1 mm (1.5 inch)

Notice



The edges of the cabinetry, if the partition is wood, should be smooth and rounded, or, if the partition is metal, be covered with an edge protector and care shall be exercised, when the appliance is installed or removed, to reduce the likelihood of damage to the power supply cord.

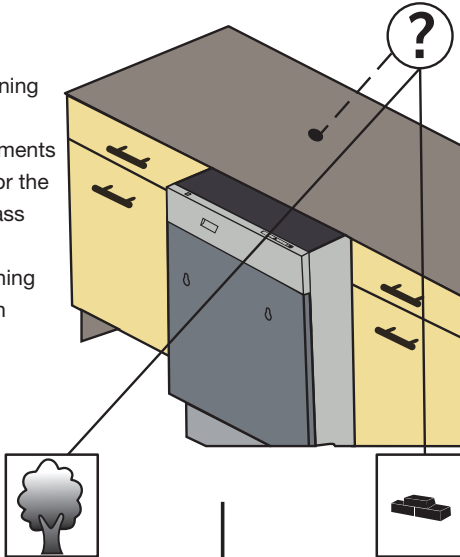

If material of countertop board is wooden etc.;

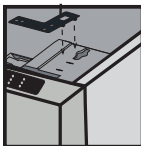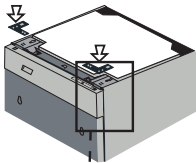

If material of countertop board is ceramic etc.;

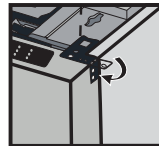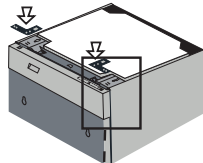

Place the two mounting brackets into the top corners of the dishwasher.

If necessary (according to counter top board material), bend sides of mounting brackets.

6.3 ADJUSTING HEIGHT

 CAUTION


First Step: Before the dishwasher is placed in the cabinetry, the front feet are closed until the end and the dishwasher is placed in the cabinetry.

Second Step: Adjust the forefoot level with a slot screwdriver to stabilize the dishwasher and raise it to the enclosure height.

Third Step: Adjust the rear foot level with a philips screwdriver to balance and raise the dishwasher to the enclosure height.


 Notice

- Make sure the dishwasher is plumb and notice dishwasher can be placed with a small clearance under the counter top.
- For front feet; turning the feet in the direction of the black arrows with the slot screwdriver allows the dishwasher to move downwards.
- For rear feet; Turning the philips screwdriver in the direction of the black arrows will take the dishwasher feet down.

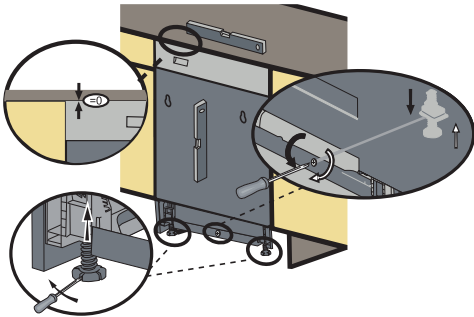

If the height of the enclosure is 33 7/8" to 35 7/8" (860mm-910mm) use short supports as shown in the figure.

ops.(+50) H= 35 7/8" - 37 3/4" (910mm-960mm)

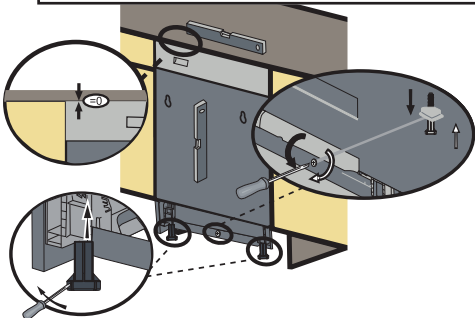

If the height of the enclosure is above 35 7/8" (910mm) use long supports as shown in the figure.

6.4 WATER SUPPLY CONNECTION

Water supply may be connected to the dishwasher in one of two ways:

- With metal braided hose.
- With copper tubing

BRAIDED HOSE/COPPER TUBING

After connections are made turn on the water supply to check for leaks.




Cold water supply line: Use minimum 3/4" O.D. copper tubing or metal braided dishwasher supply line.

Water Inlet valve of dishwasher has 3/4"-11.5NH inlet coupling thread dimension according to ASME B1.20.7-1991.


When buying water inlet hose for your dishwasher, please choose the thread dimension of the inlet hose as compatible with indicated water inlet valve inlet coupling thread dimension (3/4"-11.5NH) of your dishwasher.

- Temperatures required for soldering and sweating will damage the dishwasher's water inlet valve so if any such operation is needed, keep the heat source min. 77/8" (200mm) away from the dishwasher's water inlet valve.
- There should not be any sharp bends in the water line that may restrict the water flow.
- Teflon tape or pipe tread compound must be used for sealing the connection. Before connecting the copper water supply line to the dishwasher, flush it with hot water to clear any foreign material.

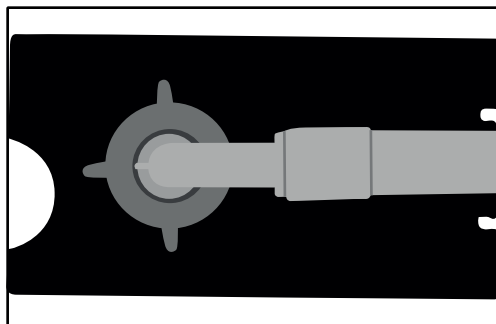




6.5 STEAM PROTECTION FOIL

Steam will be output when the dishwasher door is opened during the operation of the dishwasher and after completion of the working cycle. In order to prevent the resulting steam from collecting and damaging at the underside of the counter top, use a steam protection foil included in the plastic bag.

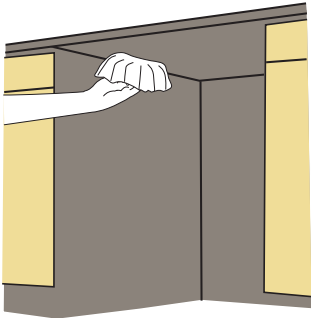

6.5.1 FITTING THE PROTECTION FOIL

Clean the surface with a damp cloth before applying steam protection to the underside of the counter top.

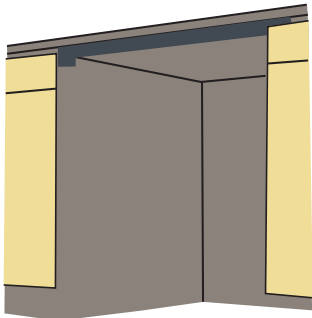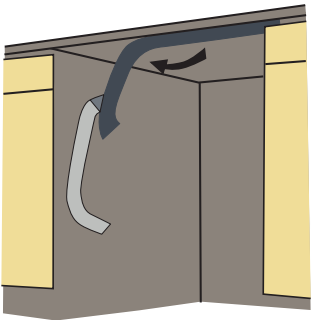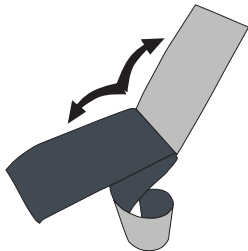


CAUTION

Steam protection foil must be applied where the steam escapes when door is first opened. **Failure to install the steam protection foil during installation can lead to damage to the cabinets and countertop.**

7. PLACEMENT OF DISHWASHER INTO THE OPENING

Now place the dishwasher into the opening and get ready to connect all hoses and electrical connections.

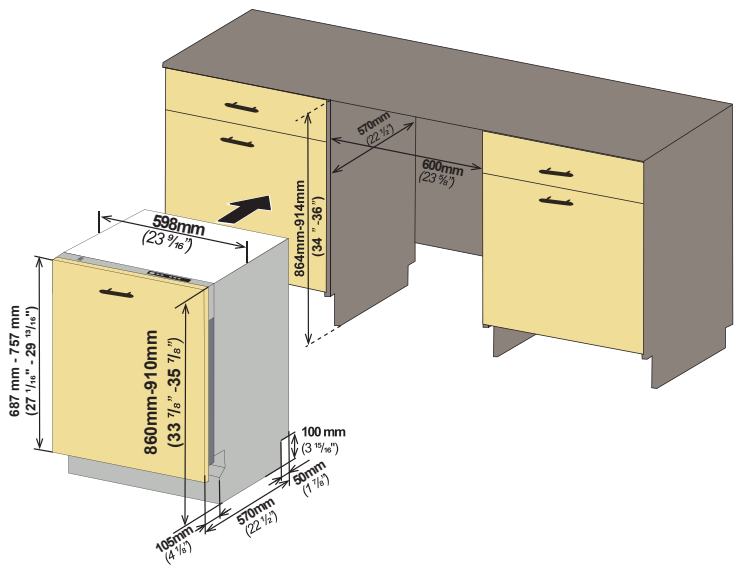

⚠ CAUTION
Make sure all hoses are pulled through the side opening of the cabinet, no hoses are kinked and all slack is taken out as shown in the figure.


7.1 DRAIN HOSE CONNECTION, WATER SUPPLY & ELECTRICAL CONNECTIONS

7.1.1 DRAIN HOSE CONNECTION

- 1. Check the parts on the sink to which the drain hose will be connected.
- 2. There are several ways to insert the drain hose into the drain hose connector of the sink, as shown in the following figures. You must connect the drain hose in accordance with the water pipe installation regulations in your region.

Garbage disposal	With an air gap	Without an air gap

A. Without disposal

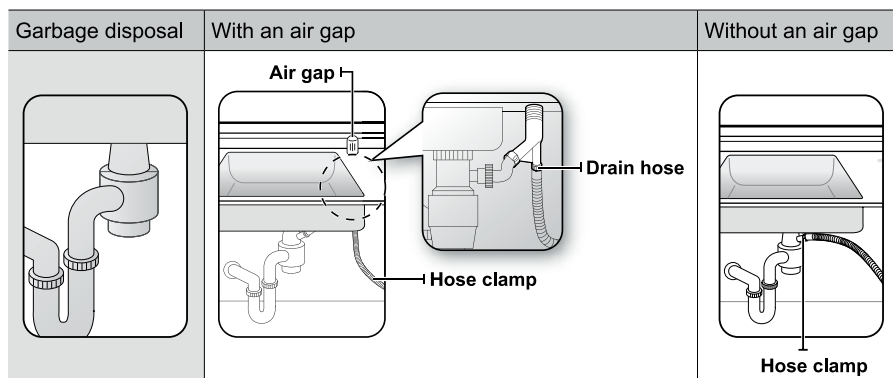

B. With disposal

3. Check the size of the sink's drain hose connector. If needed, cut the drain hose so its end fits onto the sink connector (5/8 in., 3/4 in. or 1 in. - as shown in C below). If the end of the drain hose does not fit onto the drain hose connector of the sink, use an adaptor purchasable at a plumbing/hardware supply store.

4. Slide a hose clamp over the end of the drain hose. Attach the drain hose to the sink connector, slide the hose clamp to the end of the hose, and then tighten the hose clamp.

Note : You must use a hose clamp. Failure to do so may cause water leakage.

5. If there is no air gap, make sure to hang the middle of the drain hose well above the sink cabinet base to prevent back flow (see Figure E below).

6. When drilling a hole for the drain hose on the cabinet wall, take caution not to damage the drain hose by sharp edges of the hole. On wooden walls, use sanding to soften the edges. On metal walls, use insulation tape or duct tape to cover the sharp edges around the hole.


7. Take caution not to damage the drain hose when installing the dishwasher on the floor, wall, or cabinet.

To prevent leaks or drainage problems, make sure the drain hose is not damaged, kinked, or twisted.


8. Do not cut the wrinkled area of the drain hose to fit the size. When arranging the drain hose, take caution not to contact on sharp edges of the cabinet or under-sink.

- Be careful when cutting off the end of the drain hose as there is a risk of injury. Clean around the sink's drain connection so that it does not damage the hose. Check for any foreign items in the drain hose and remove them.


- When arranging the drain hose, make sure the drain hose is not cut, torn, or broken by any sharp edges of the floor, the product itself, or the cabinet. A damaged drain hose causes a leak.

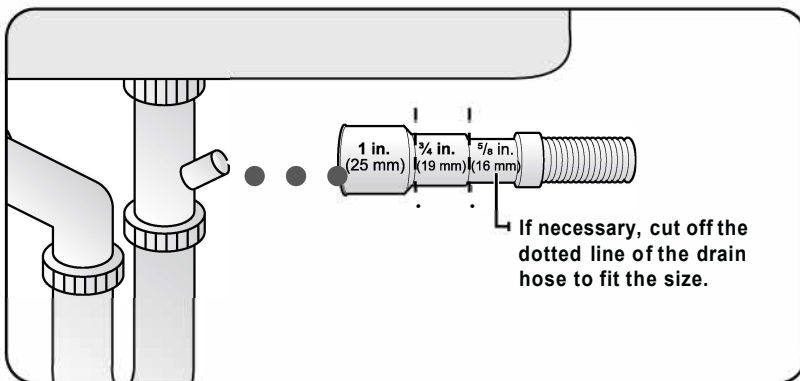

C

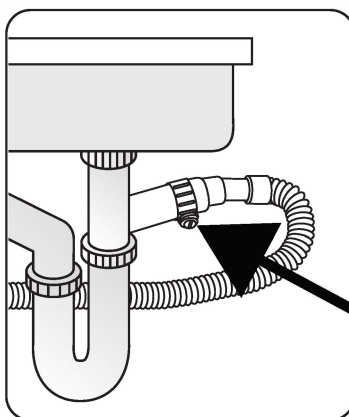


D

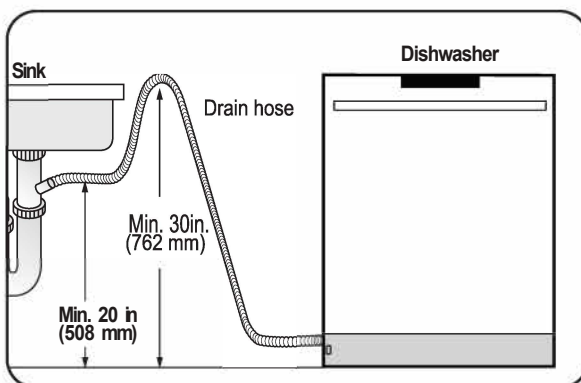

E

7.2 ADJUSTING THE MOVABLE TOE KICK (MODEL DEPENDING)

Now that you have successfully installed the dishwasher, you need to attach the toe kick to the dishwasher. The two piece toe kick can be adjusted to the height and depth needed for your kitchen.


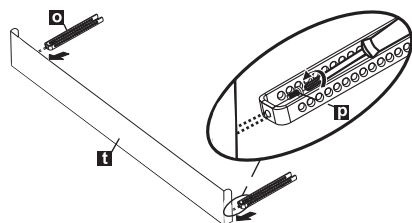


1. A. If the height is 33 7/8" to 35 7/8" (860mm-910mm) and use short supports; adjustable plinth metal with 80 mm length (v), toe kick brackets(o) are installed. Mounting is done using Screws $\varnothing$ 5/32" x 7/32" ($\varnothing$ 4mm x 6mm) with a Philips Screwdriver.

B. A. If the height is above 35 7/8" (910mm) and use short supports; adjustable plinth metal with 130 mm length (v), toe kick brackets(o) are installed. Mounting is done using Screws $\varnothing$ 5/32" x 7/32" ($\varnothing$ 4mm x 6mm) with a Philips Screwdriver.

2. The adjustable plinth number is determined according to the required distance and assembled to each other.

3. As shown in the Figure, the cylindrical feet of the adjustable plinth are attached to the plinth fixing metal parts and shifted through the cavity of the part.

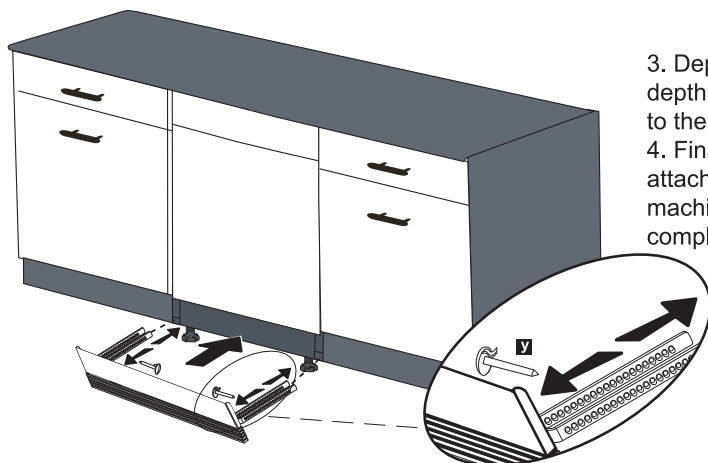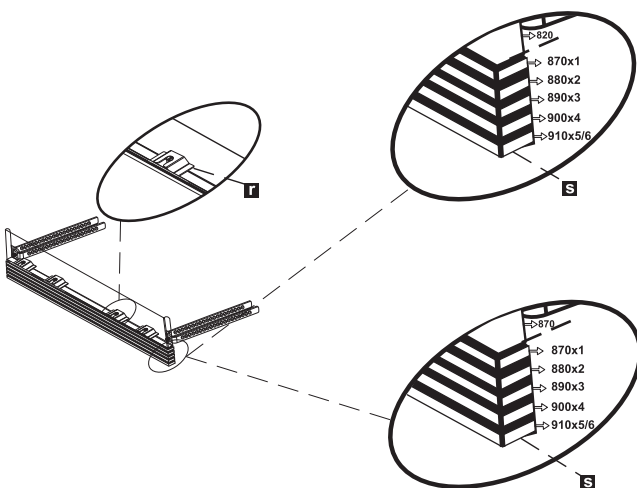


3. Depending on the desired depth, plinth locking(y) is attached to the toe kick bracket(o).

4. Finally, Toe kick brackets(o) are attached to the gaps under the machine and the installation is completed.

7.5 INSTALLING THE OUTER DOOR (MODEL DEPENDING)

As shown in Figure A, you must measure the height and depth of the cabinetry to determine the dimensions of the outer door.

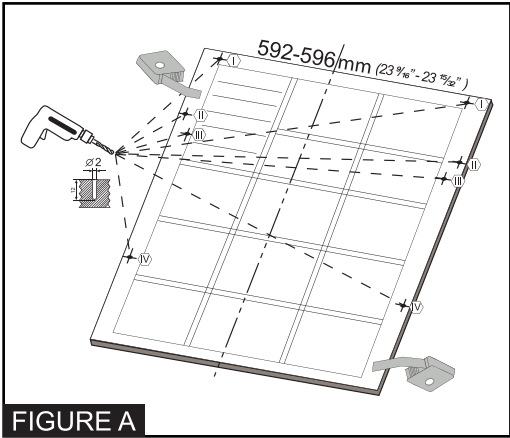


1. The mounting template in the plastic bag is fixed to the inside of the Dishwasher door.

Notice

When fixing the mounting template, ensure that the sheet is secured to the inside of the door. Ensure the template remains fixed throughout this process to ensure the hardware is fixed precisely on the back of the panel.

2. As shown in Figure A, using a 2mm bit, pre-drill pilot holes at the points shown to a maximum depth of 1/2" (12mm). Take care not to drill completely through the panel.

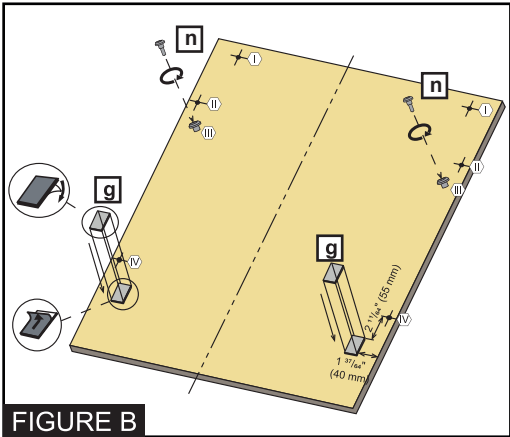


3- As shown in Figure B, Screws (n) Ø 5/32" x 27/32" (Ø 4mm x 21.5mm) is installed in positions III.

4- As shown in Figure B, Wooden Door Fixing Strips are installed in positions shown in the figure.

Notice


Remove paper backing to expose the sticky tape surface of the fixing strips (g)



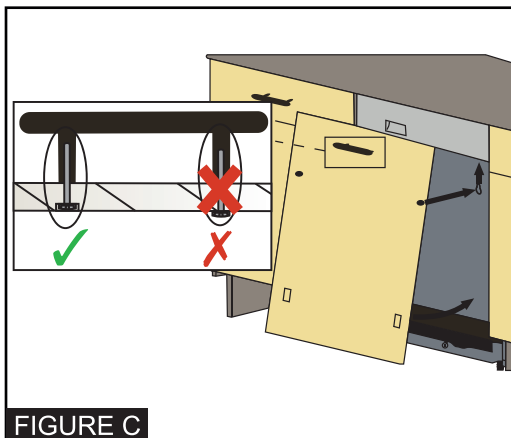

5- Before mounting the wooden panel on the dishwasher, mount the handle on the wooden door as in figure C. Ensure screw heads are flush / countersunk

6- Fix the panel to the door by passing screws (6 x f) through the open door. Screws should align with the holes pre-drilled in accordance with the template as shown in Figure D.

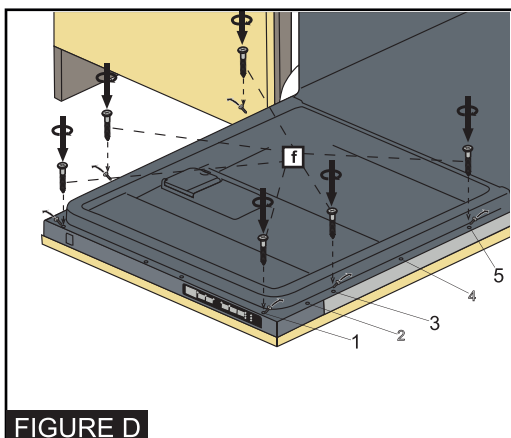

7- As shown in Figure D, Screws Ø 5/32" x 1-5/8" (Ø 4mm x 42.5mm) are installed in positions 1,3 and 5.

Notice

Before mounting the Screws Ø 5/32" x 1-5/8" (Ø 4mm x 42.5mm); Screws in positions 1,3 and 5 must be removed.


8- According to the weight of the assembled wooden door, the balancing must be provided by the mechanism shown in Figure E.


- If the wooden door is falling down **too sharply when opened**, the mechanism must be turned in the direction of the white arrow with a philips screwdriver.
- If the wooden door **is springing back up**, the mechanism must be turned in the direction of the black arrow with a philips screwdriver.

Notice


Minimum Philips Screwdriver Diameter is 15/64" (6 mm) for this application.

9- Maximum weight of custom panel must not exceed 9 kg.

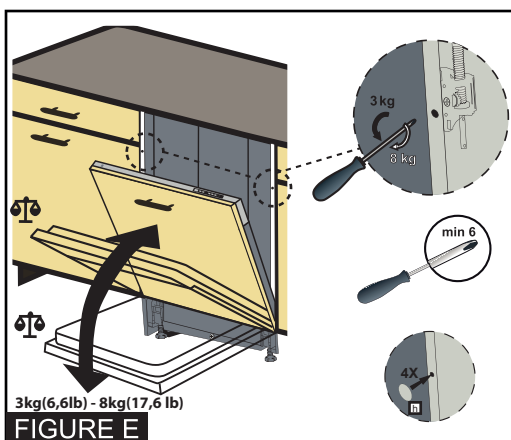

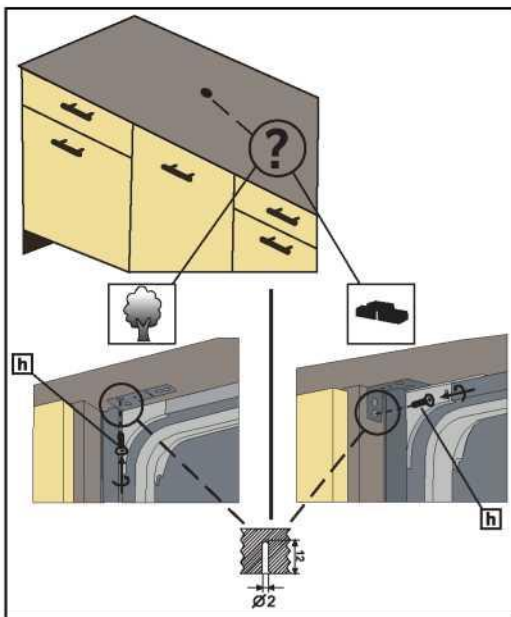

10- The mounting brackets previously attached to the dishwasher are also fixed in the cabinet with 5/32 in. diameter x 19/32 in. screws (4mm diameter x 15mm).

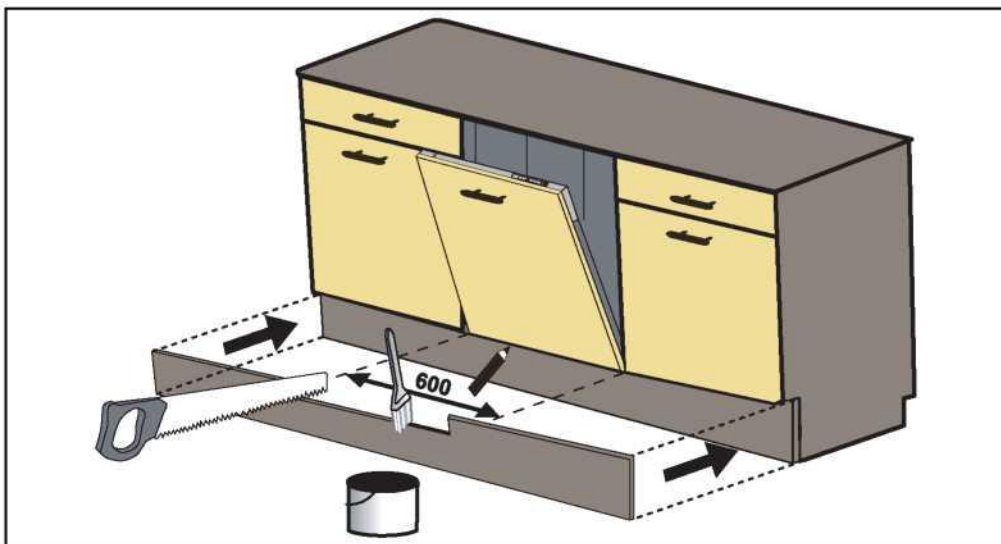

11. Check whether the bottom of the door hits the toe kick of the kitchen cabinet.
- If the door hits the toe kick cut the necessary section out of the toe kick.
 - Apply silicon or sealant to the cut edge of the kitchen cabinet toe kick or paint so it does not absorb moisture. Cutout width should be equivalent to width of opening dishwasher is installed in to prevent interference with door panel when opening / closing.

8. INSTALLER CHECKLIST

Your installer must have completed and checked the following:

- The dishwasher is square and level.
- The dishwasher is fastened securely to the cabinetry.
- The dishwasher door opens and closes freely. The dishwasher door must close without hitting any cabinetry or counter top.
- The inlet water supply is turned on and checked for leaks.
- The drain hose has been connected and checked for leaks. There must be no kinks or obstructions in the drain hose.
- The drain hose must be installed with a 28" (710mm) high drain loop for drain hook-ups without any air removed.
- If you connect the water drain hose to a trap spigot under the sink, remove the plastic membrane. If you do not remove the entire membrane, remaining food can cause a blockage in the drain hose spigot. Ensure a hose clamp is used to secure the hose to the spigot.
- The spray arms are free and rotate freely.
- The rinse cycle has been run.
- The water level will be below the filter screen after the end of the wash program. it is normal to find some water in the drain filter area.

9. FINAL INSTRUCTIONS

1. Press the On/Off button to turn the dishwasher on.
2. Power indicator light comes on.
3. Use the Program Select button to choose a washing program.
4. Start the program with the Start/Pause/Cancel button.
5. Run the dishwasher through one complete cycle. When the wash cycle is completed, use the On/Off button to turn the dishwasher off.

[I] Notice:

If the dishwasher does not operate properly, refer to the self help hints.

10. SELF HELP HINTS:

The screen does not come on:

- Check to make sure the breaker to the dishwasher is in the on position.
- Check to make sure that the Supply cord is plugged.

No Water is coming into the dishwasher:


- Check to make sure the water shut-off is in the ON position.

Water does not drain:

- Make sure drain hose is not kinked or comes out of air gap next to the sink.
- Remove drain hose from disposal making sure plug is removed.

[I] Notice:

- If your dishwasher is not operating properly after following these steps: Contact your dealer to schedule an authorized service agent to inspect your new dishwasher for any function related failure.
- The manufacturer warranty does not cover installation, conversion or customer education service visits.



You will find the model and serial number information on the label located on the right-hand side of the inner door of your dishwasher, as shown above.

[I] Notice:

Please make a copy of your invoice and keep it with this manual and register your dishwasher on-line.

4. MATÉRIAUX FOURNIS

4.1 PIÈCES FOURNIES

a.		x1
b.		x1
c.		x1
d.		x1
e.		x2
f.		x6
g.		x2
h.		x1
j.		x1
k.		x2
l.		x2
m.		x2
n.		x4
o.		x1
p.		x1
r.		x1
s.		x2
t.		x3

Matériaux fournis

Les pièces nécessaires au positionnement du lave-vaisselle sont dans des sacs en plastique. Vérifiez que toutes les pièces suivantes sont incluses avec votre appareil:

Sac de pièces de lave-vaisselle 1

Ce sac pour lave-vaisselle est livré avec les pièces suivantes :

- a. Bandelette réactive (selon le modèle)
- b. Collier de serrage

Sac de pièces de lave-vaisselle 2

- c. Plan de montage
- d. Bandes de garniture latérales (droite)
- e. Bandes de fixation de porte en bois

Sac de pièces de lave-vaisselle 3

- f. Vis 5/32" x 53/32" (4mm x 42mm)
- g. Vis 5/32" x 19/32" (4 mm x 15 mm)
- h. Support de montage gauche
- j. Support de montage à droite
- k. Vis 5/32" x 27/32" (4 mm x 21,5 mm)


Sac de pièces de lave-vaisselle 4 (SELON LE MODÈLE)

- l. Support de coup de pied
- m. Vis 5/32" x 7/32" (4 mm x 6 mm)
- n. Métal de fixation de socle
- o. Socle réglable
- p. Plinthe réglable en métal (130mm) (selon modèle)
- r. Plinthe réglable en métal (80mm) (selon modèle)
- s. Verrouillage du socle

Sac de pièces de lave-vaisselle 5 (SELON LE MODÈLE)

- t. Longues jambes

5. CARACTÉRISTIQUES DU LAVE-VAISSELLE

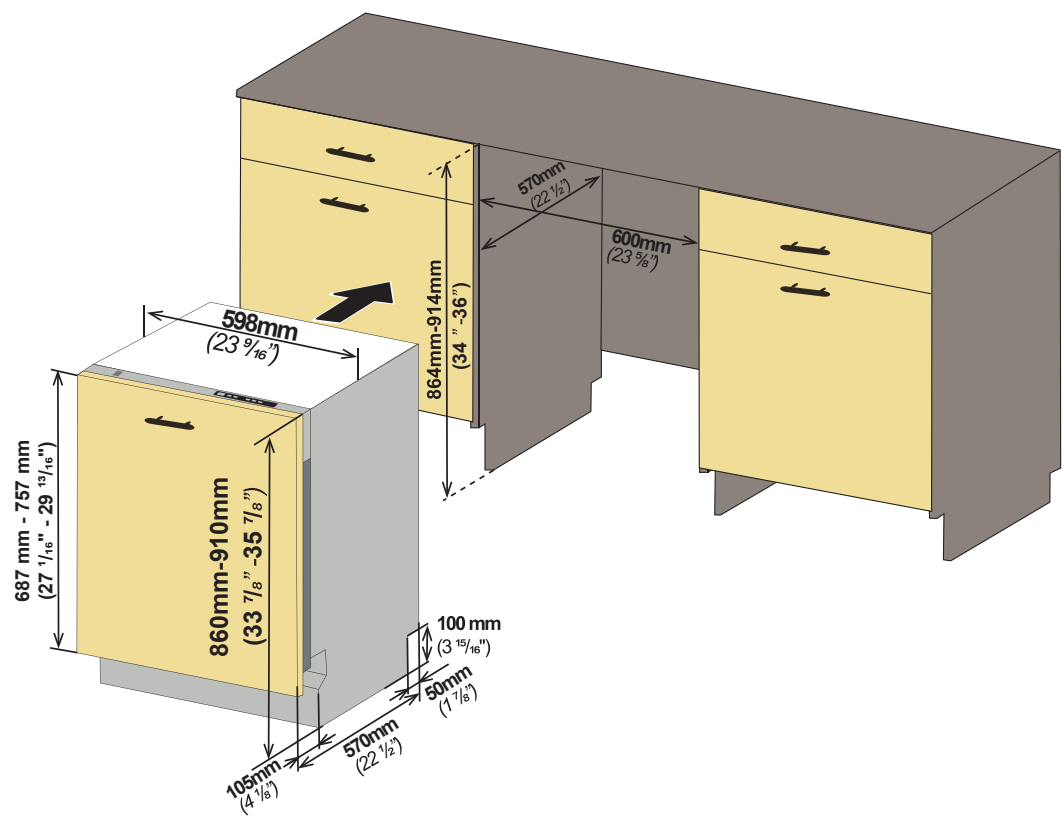

5.1 CARACTÉRISTIQUES TECHNIQUES

Capacité de charge	15 couverts
Pression d'eau admissible	4.35 - 145 psi (0,3 - 10 bars)
Raccordements électriques	120 V (volts), 12 A (ampères), 60 Hz (hertz)
Puissance totale	1 400 W (watts)
Puissance de chauffe	1 100 W (watts)

I Instructions :
Parce que nous nous efforçons continuellement d'améliorer nos produits, nous pouvons modifier leurs caractéristiques et leur design sans préavis.
Cet appareil répond aux directives suivantes :
UL 749 Directive sur les lave-vaisselles domestiques.

6. PRÉPARATION DE L'ENCEINTE

6.1 PRÉPARATION ÉLECTRIQUE

AVERTISSEMENT

Le lave-vaisselle est conçu pour une alimentation électrique de 120 V, 60 Hz, CA, branché à un circuit électrique indépendant, correctement mis à la terre avec un fusible ou des disjoncteurs prévus pour 15 ampères.


6.2 PRÉPARATION POUR L'INSTALLATION DES SUPPORTS DE FIXATION

AVERTISSEMENT

Les supports de fixation qui se trouvent dans le sachet en plastique doivent être utilisés lorsque le lave-vaisselle est installé dans un meuble. L'utilisation de pièces autres que les supports de fixation peut entraîner des dommages matériels ou corporels.

Instructions

Il devrait y avoir une ouverture à travers la cloison entre les compartiments assez grande pour permettre le passage de la fiche de fixation. La dimension la plus longue de l'ouverture ne doit pas dépasser 38,1 mm (1,5 pouces).

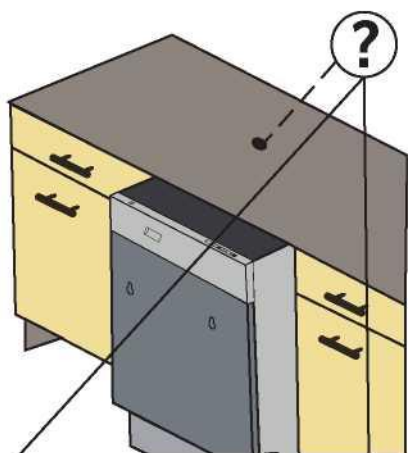


Instructions


Les bords des armoires, si la cloison est en bois, doivent être lisses et arrondis, ou, si la cloison est en métal, doivent être couverts d'un protecteur de bord, et il convient de faire preuve de prudence lors de l'installation ou du retrait de l'appareil pour réduire le risque d'endommagement du cordon d'alimentation.



Si le matériau du panneau de comptoir de cuisine est en bois, etc.;

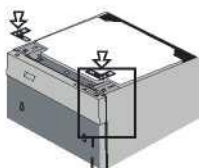

Si le matériau du panneau de comptoir de cuisine est en céramique, etc.;

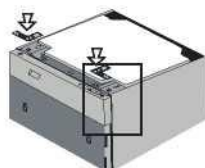

Placez les deux supports de fixation dans les coins supérieurs du lave-vaisselle.

Si nécessaire (selon le matériau du comptoir), pliez les côtés des supports de fixation.

6.3 AJUSTEMENT DE LA HAUTEUR

 ATTENTION

Première étape: Avant de placer le lave-vaisselle dans le meuble, les pieds avant sont au plus serré puis le lave-vaisselle est placé dans le meuble d'installation.

Deuxième étape: Ajustez le niveau des pieds avant à l'aide d'un tournevis plat pour stabiliser le lave-vaisselle et adapter sa hauteur à celle de l'enceinte.


Troisième étape: Ajustez le niveau des pieds arrière à l'aide d'un tournevis Philips pour stabiliser le lave-vaisselle et adapter sa hauteur à celle de l'enceinte.

 Instructions

-Assurez-vous que le lave-vaisselle est bien droit et notez que vous pouvez laisser un petit dégagement entre le lave-vaisselle et le comptoir.


-Pour les pieds avant: si vous tournez les pieds dans le sens des flèches noires avec le tournevis plat, le lave-vaisselle s'abaisse.

-Pour les pieds arrière: si vous tournez le tournevis Philips dans le sens des flèches noires, les pieds du lave-vaisselle s'abaissent

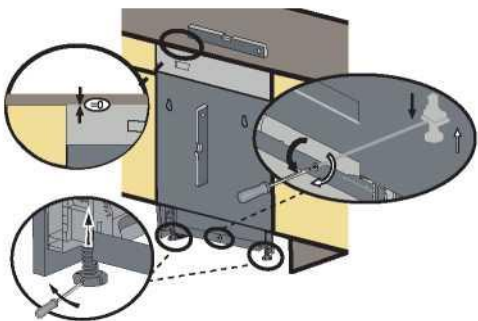

Si la hauteur de l'enceinte est de 33 7/8 po à 35 7/8 po (860 mm-910 mm), optez pour une faible hauteur de pieds comme indiqué sur la figure.

ops.(+50) H= 35 7/8 po - 37 3/4 po (910 mm-960 mm)

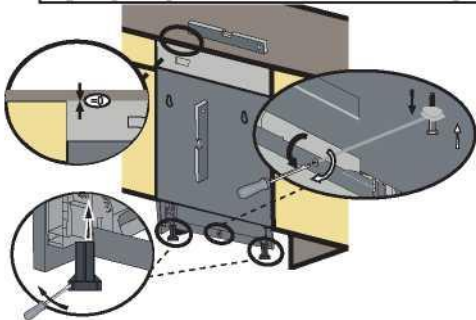

Si la hauteur de l'enceinte est de plus de 35 7/8 po (910 mm), optez pour une grande hauteur de pieds comme indiqué sur la figure.

6.4 RACCORD D'ALIMENTATION EN EAU

L'alimentation en eau peut être raccordée au lave-vaisselle de l'une des deux façons suivantes:

- Avec tuyau métallique tressé.
- Avec un tube en cuivre

TUYAU TRESSÉ / TUBE EN CUIVRE

Une fois les raccords effectués, allumez l'alimentation en eau pour vérifier l'absence de fuites.



Conduite d'alimentation en eau chaude: Utilisez un tube en cuivre d'un diamètre extérieur d'au moins 3/4 po (1,91 cm) ou un tuyau d'alimentation tressé en métal pour lave-vaisselle.


La dimension de filetage du raccord d'entrée de la vanne d'entrée d'eau du lave-vaisselle est de 3/4 po-11,5 NH conformément à la norme ASME B1.20.7-1991.

Lorsque vous achetez un tuyau d'entrée d'eau pour votre lave-vaisselle, veuillez choisir une dimension du filetage du tuyau d'entrée compatible avec la dimension du filetage du raccord (3/4 po-11,5NH) de votre lave-vaisselle.

•Les températures requises pour la soudure et l'exsudation endommageront le robinet d'arrivée d'eau du lave-vaisselle. Si une telle opération est nécessaire, maintenez la source de chaleur à une distance d'au moins 200 mm (77/8 po) du robinet d'arrivée d'eau du lave-vaisselle.

•Il ne doit pas y avoir de courbures dans la conduite d'alimentation en eau car cela pourrait restreindre le débit de l'eau.

•Pour l'étanchéité du raccord, utilisez du ruban téflon ou un composé pour filetage pour sceller les raccords de plomberie. Avant de raccorder la conduite d'alimentation en eau en cuivre au lave-vaisselle, rincez-la à l'eau chaude pour éliminer tout corps étranger.

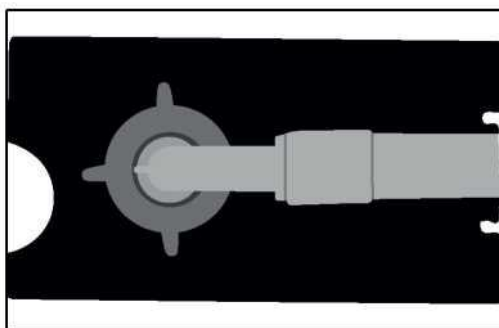




6.5 Feuille de protection contre la vapeur

De la vapeur est produite lorsque la porte du lave-vaisselle est ouverte pendant le fonctionnement du lave-vaisselle et à la fin du cycle de travail. Afin d'éviter que la vapeur qui en résulte ne s'accumule et n'endommage le dessous du comptoir, utilisez une feuille de protection contre la vapeur à l'intérieur qui se trouve dans le sachet en plastique.



6.5.1 MONTAGE DE LA FEUILLE DE PROTECTION

Nettoyez la surface avec un chiffon humide avant d'appliquer la feuille de protection contre la vapeur sur la face inférieure du comptoir.

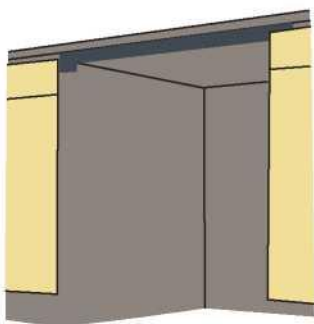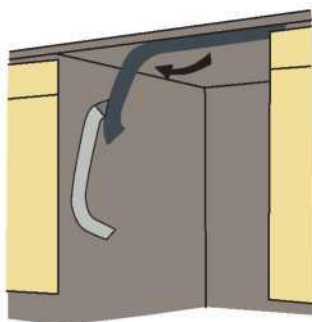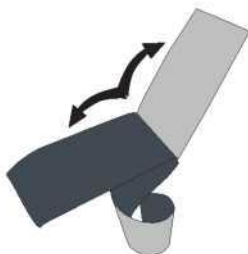


ATTENTION

Une feuille de protection contre la vapeur doit être appliquée à l'endroit où la vapeur s'échappe lorsque la porte est ouverte pour la première fois. **Si le film de protection contre la vapeur n'est pas installé en même temps que le lave-vaisselle, les meubles et le comptoir risquent d'être endommagés.**

7. PLACEMENT DU LAVE-VAISSELLE DANS L'OUVERTURE

Placez maintenant le lave-vaisselle dans l'ouverture et préparez-vous à raccorder tous les tuyaux et les connexions électriques.

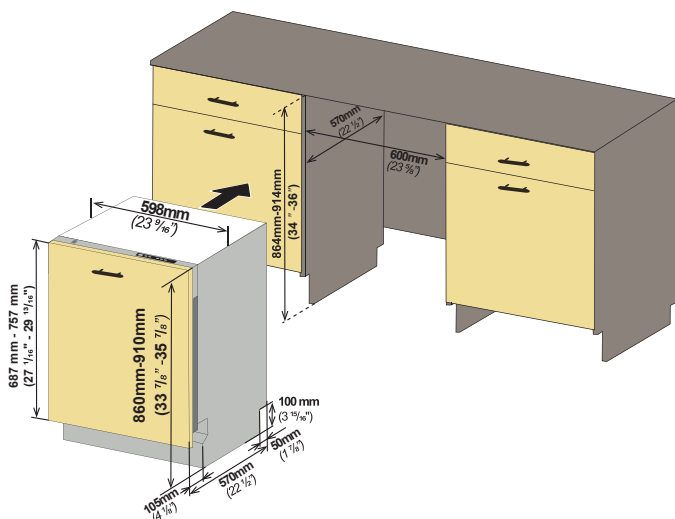


ATTENTION

Assurez-vous que tous les tuyaux sont bien passés dans l'ouverture latérale du meuble, qu'aucun tuyau ne présente de pli et que le mou des tuyaux est tiré comme indiqué sur la figure.


7.1 RACCORDEMENT DU TUYAU DE VIDANGE, ALIMENTATION EN EAU ET RACCORDEMENTS ÉLECTRIQUES

7.1.1 RACCORDEMENT DU TUYAU DE VIDANGE

1. Vérifiez les pièces auxquelles le tuyau de vidange sera raccordé au niveau de l'évier.
2. Il existe plusieurs façons d'insérer le tuyau de vidange dans le raccord du tuyau de vidange de l'évier, comme le montrent les figures suivantes. Vous devez raccorder le tuyau de vidange conformément à la réglementation en vigueur dans votre région en matière d'installation de conduites d'eau.

Broyeur à déchets	Avec coupure antirefoulement	Sans coupure antirefoulement
	 Coupure antirefoulement Tuyau de vidange Collier de serrage pour tuyau	 Collier de serrage pour tuyau

A. Sans broyeur

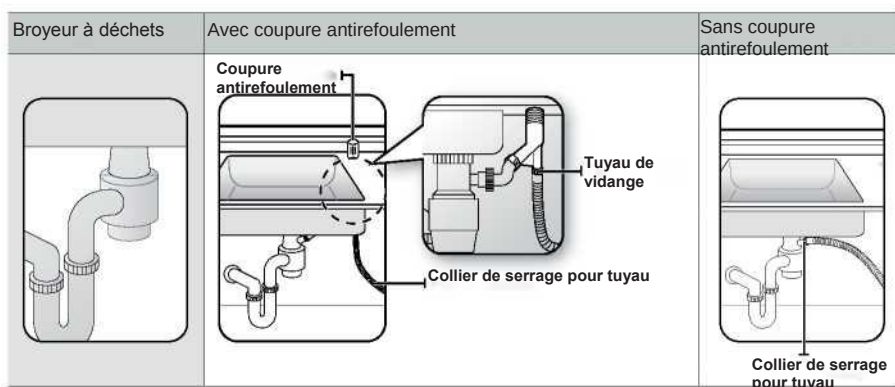

B. Avec broyeur

3. Vérifiez la taille du raccord du tuyau de vidange de l'évier. Au besoin, coupez le tuyau de vidange de façon à ce que son extrémité s'adapte au raccord de l'évier [5/8 po (15,88 mm), 3/4 po (19,05 mm), ou 1 po (25,4 mm), tel qu'illustré en C ci-dessous]. Si l'extrémité du tuyau de vidange ne se fixe pas sur le raccord du tuyau de vidange de l'évier, utilisez un adaptateur que vous pouvez acheter dans un magasin de plomberie ou de quincaillerie.

4. Glissez un collier de serrage pour tuyau sur l'extrémité du tuyau de vidange. Fixez le tuyau de vidange au raccord de l'évier, faites glisser le collier de serrage jusqu'à l'extrémité du tuyau, puis serrez le collier de serrage. Remarque: Vous devez utiliser un collier de serrage pour tuyau. Le non-respect de cette consigne peut entraîner des fuites d'eau.

5. S'il n'y a pas de coupure antirefoulement, veillez à placer le milieu du tuyau de vidange bien au-dessus de la base du meuble de l'évier pour éviter le refoulement (voir Figure E ci-dessous).

6. Lors du perçage d'un trou pour le tuyau de vidange dans la paroi du meuble, veillez à ne pas percer le tuyau de vidange sur les bords tranchants du trou. Sur les murs en bois, utilisez du papier de verre pour lisser les bords. Sur les murs métalliques, utilisez du ruban isolant ou du ruban adhésif en toile pour recouvrir les bords tranchants autour du trou.

7. Faites attention à ne pas endommager le tuyau de vidange lorsque vous installez le lave-vaisselle sur le sol, au mur ou dans un meuble.


Pour éviter les fuites ou les problèmes de vidange, assurez-vous que le tuyau de vidange n'est pas endommagé, plié ou tordu.

8. Ne coupez pas la zone plissée du tuyau de vidange pour adapter sa taille. Lors du placement du tuyau de vidange, veillez à ne pas toucher les bords tranchants du meuble ou sous l'évier.


- Soyez prudent lorsque vous coupez l'extrémité du tuyau de vidange, car il y a un risque de blessure.

Nettoyez le pourtour du raccord de vidange de l'évier pour qu'il n'endommage pas le tuyau. Vérifiez qu'il y a des corps étrangers dans le tuyau de vidange et enlevez-les, le cas échéant.


- Lorsque vous placez le tuyau de vidange, assurez-vous qu'il n'a pas été coupé, plié ou percé par des bords tranchants du sol, du meuble, ou du produit lui-même. Un tuyau de vidange endommagé provoque des fuites.

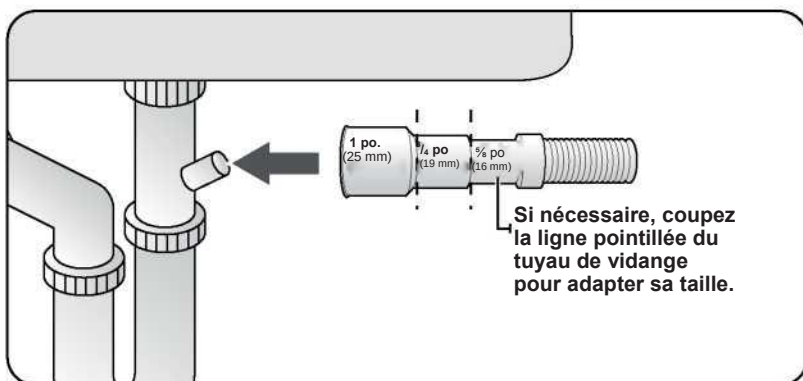

C

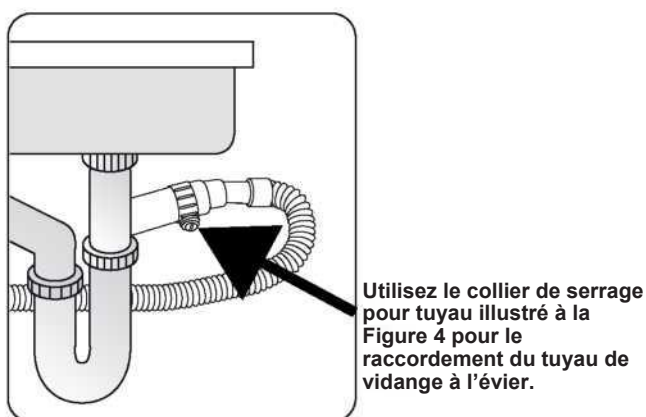


D

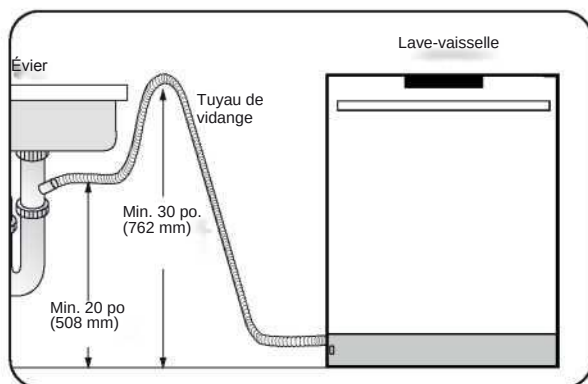

E

7.2 RÉGLAGE DU COUP-DE-PIED AMOVIBLE (SELON LE MODÈLE)

Maintenant que vous avez installé le lave-vaisselle, vous devez fixer le coup-de-pied au lave-vaisselle. Le coup-de-pied en deux pièces peut être ajusté à la hauteur et à la profondeur requises pour votre cuisine.

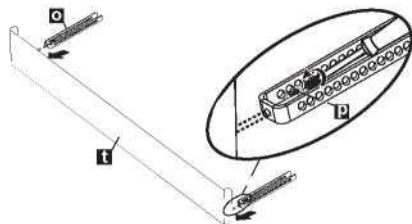


1. A. Si la hauteur est de 33 7/8 po à 35 7/8 po (860 mm-910 mm) et que vous utilisez des supports courts ; installez un élément de réglage de plinthe métallique de 80 mm de longueur (v) et des supports de coup-de-pied (o). Le montage se fait à l'aide de vis de 0 5/32 po x 7/32 po (4 mm x 6 mm) de diamètre avec un tournevis Philips.

B. A. Si la hauteur est de 35 7/8 po (910 mm) et que vous utilisez des supports courts ; installez un élément de réglage de plinthe métallique de 130 mm de longueur (v) et des supports de coup-de-pied (o). Le montage se fait à l'aide de vis de 0 5/32 po x 7/32 po (4 mm x 6 mm) de diamètre avec un tournevis Philips.


2. Le nombre de plinthes réglables est déterminé en fonction de la distance requise et elles sont assemblées les unes aux autres.

3. Comme le montre la figure, les pieds cylindriques de la plinthe réglable sont fixés aux pièces métalliques de fixation de la plinthe et déplacés à travers la cavité de la pièce.

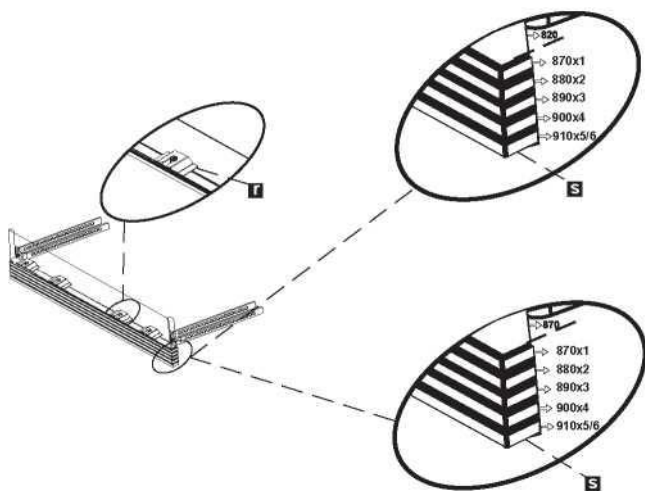


3. En fonction de la profondeur souhaitée, le système de verrouillage de la plinthe (y) est fixé sur le support de coup-de-pied (o).

4. Enfin, les supports de coup-de-pied (o) sont fixés aux espaces sous la machine et l'installation est terminée.

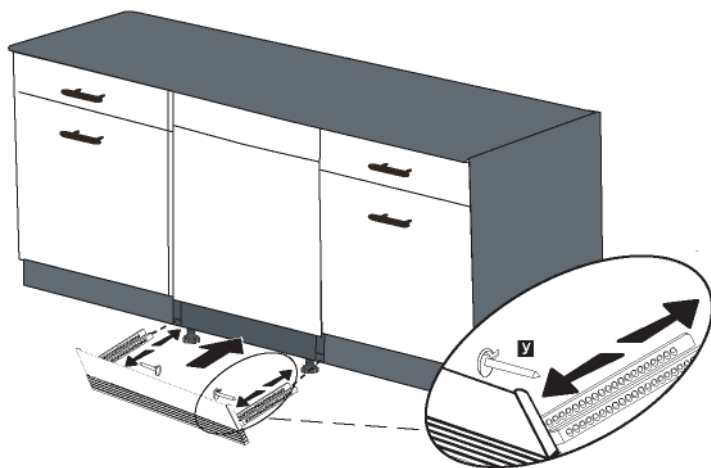

7.5 INSTALLATION DE LA PORTE EXTÉRIEURE (SELON LE MODÈLE)

Comme le montre la figure A, vous devez mesurer la hauteur et la profondeur des meubles pour déterminer les dimensions de la porte extérieure.

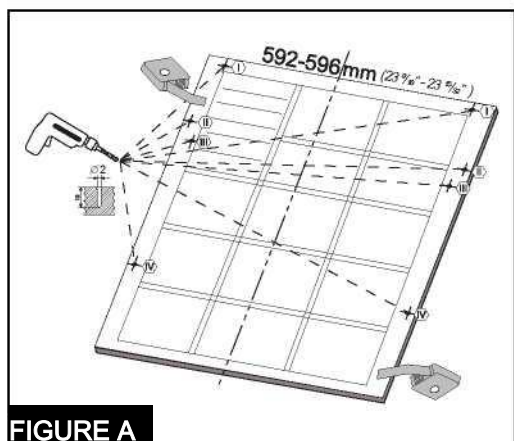


1. Le plan de montage dans le sac en plastique est fixé à l'intérieur de la porte du lave-vaisselle.

Instructions

Lors de la fixation du plan de montage, assurez-vous que le plan est collé à l'intérieur de la porte. Veuillez à ce que le plan de montage soit bien à plat sur la porte.

2. Comme le montre la figure A, les trous de vis sont percés sur la porte extérieure conformément aux points indiqués sur le plan de montage. Diamètre de la mèche : 5/64 po (2 mm)
Profondeur de la mèche : 15/32 po (12 mm)

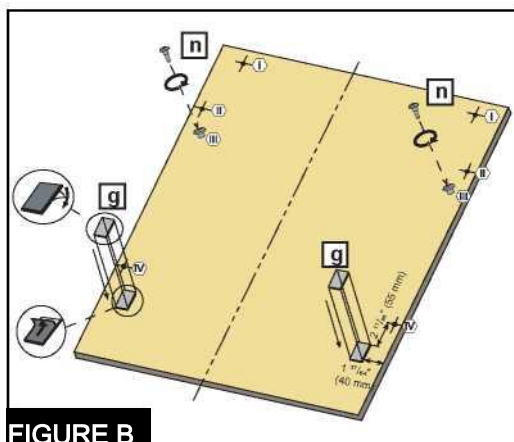


- 3- Comme le montre la figure B, les vis 0 5/32 po x 27/32 po (0,4 mm x 21,5 mm) sont installées en positions III.

- 4- Comme le montre la figure B, les bandes de fixation pour portes en bois sont installées aux positions indiquées sur la figure.

Instructions


Avant de fixer les bandes de fixation pour portes en bois, les papiers blancs des deux côtés doivent être ôtés de la surface.



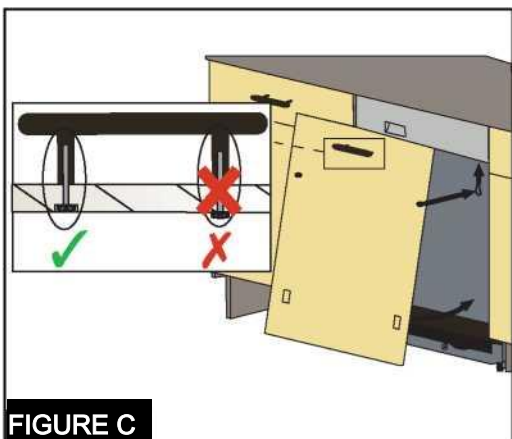

5- Avant de monter la porte en bois sur le lave-vaisselle, montez la poignée sur la porte en bois comme le montre la figure C.


6- Fixez les vis situées sur la porte en bois à la porte du lave-vaisselle aux points correspondants sur le plan de montage, comme le montre la Figure D.

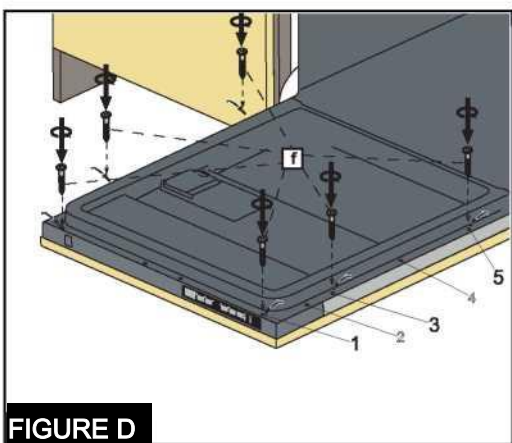

7- Comme le montre la figure D, Des vis de 5/32 po de diamètre x 53/32 po (4 mm de diamètre x 42,5 mm) sont installées en positions I, III et V.

Instructions

Avant de monter les vis de 5/32 po de diamètre x 53/32 po (4 mm de diamètre x 42,5 mm) ; Retirez les vis des positions I, III et V.

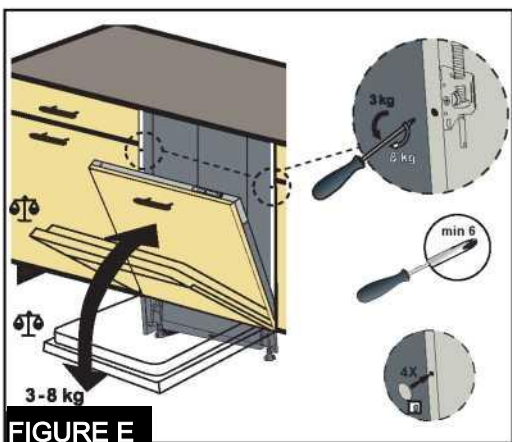


8- En fonction du poids de la porte en bois assemblée, l'équilibrage doit être assuré par le mécanisme illustré à la figure E.

- Si la porte en bois penche vers le bas, le mécanisme doit être tourné dans le sens de la flèche blanche à l'aide d'un tournevis Philips.
- Si la porte en bois remonte trop, le mécanisme doit être tourné dans le sens de la flèche noire à l'aide d'un tournevis Philips.


Instructions

Le diamètre minimum du tournevis Philips est de 6 mm (15/64 po) pour cette application.

9- Le poids maximal du panneau sur mesure ne doit pas dépasser 9 kg.

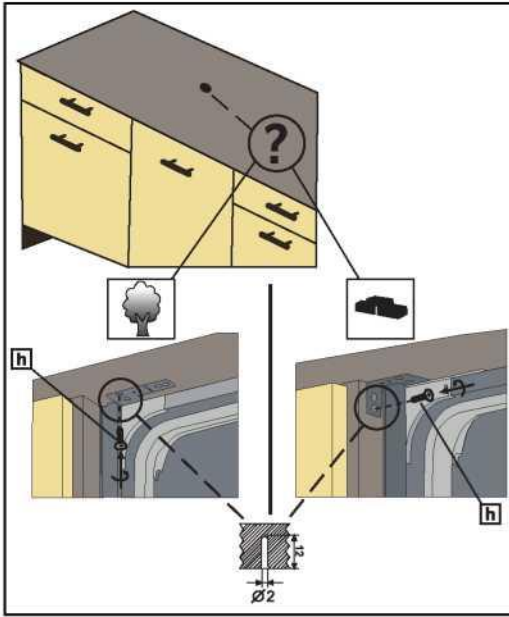

10- Les supports de fixation préalablement fixés au lave-vaisselle sont également fixés dans le meuble avec des vis de 5/32 po de diamètre x 19/32 po (4 mm de diamètre x 15 mm).

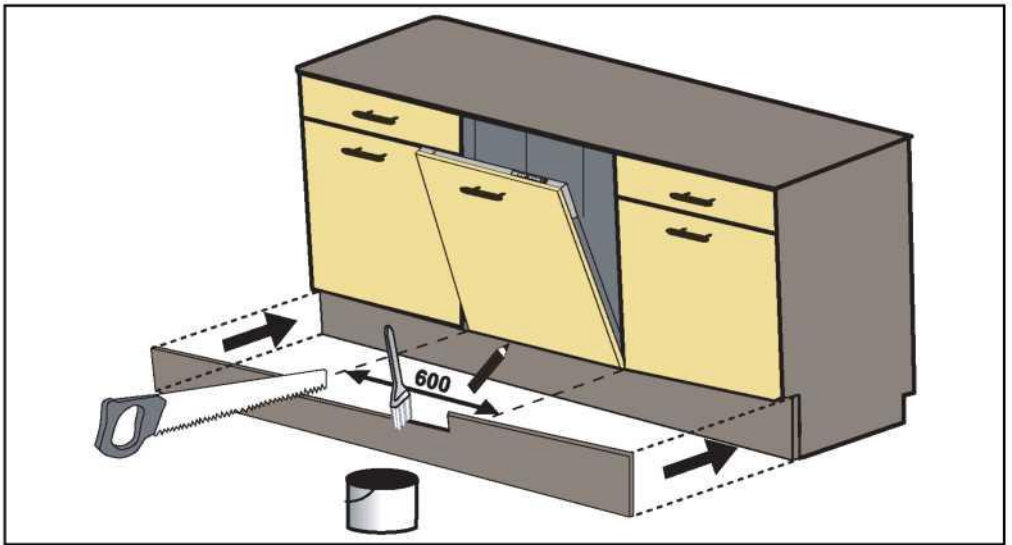

11. Vérifiez si le bas de la porte touche le coup-de-pied du meuble de cuisine.

- Si la porte touche le coup-de-pied, coupez la section nécessaire du coup-de-pied.
- Appliquez du silicone ou du mastic sur le bord coupé du coup-de-pied du meuble de cuisine ou peignez-le pour qu'il n'absorbe pas l'humidité.

8. LISTE DE VÉRIFICATION POUR L'INSTALLATEUR

Votre installateur doit avoir complété et vérifié les points suivants :

- Le lave-vaisselle est à niveau.
- Le lave-vaisselle est solidement fixé au meuble.
- La porte du lave-vaisselle s'ouvre et se ferme librement. La porte du lave-vaisselle doit se fermer sans toucher les meubles ni le comptoir.
- L'arrivée d'eau est allumée et l'étanchéité est vérifiée.
- Le tuyau de vidange a été raccordé et son étanchéité a été vérifiée. Il ne doit pas y avoir de plis ou d'obstructions dans le tuyau de vidange.
- Le tuyau de vidange doit être installé à une hauteur de vidange d'au moins 28 po (710 mm) pour les raccords de vidange sans aucun retrait d'air.
- Si vous branchez le tuyau de vidange d'eau à un embout de siphon sous l'évier, retirez la membrane en plastique. Si vous n'enlevez pas toute la membrane, le reste de la nourriture peut causer un blocage dans l'embout du tuyau de vidange. Utilisez un collier de serrage pour fixer le tuyau au robinet.
- Les bras d'aspersion sont dégagés et pivotent librement.
- Le cycle de rinçage est terminé.
- **Le niveau de l'eau sera sous le filtre après la fin du programme de lavage. Il est normal de trouver de l'eau dans la zone du filtre de vidange.**

9. INSTRUCTIONS FINALES

1. Appuyez sur le bouton Marche/Arrêt pour allumer le lave-vaisselle.
2. L'indicateur d'alimentation s'allume.
3. Utilisez la touche sélection programme pour choisir un programme de lavage.
4. Démarrez le programme à l'aide de la touche Départ/Pause/Annuler.
5. Faites fonctionner le lave-vaisselle pendant un cycle complet. Lorsque le cycle de lavage est terminé, utilisez le bouton Marche/Arrêt pour éteindre le lave-vaisselle.

Instructions :

Si le lave-vaisselle ne fonctionne pas correctement, consultez les conseils d'autoassistance.

10. CONSEILS D'AUTOASSISTANCE :

L'écran ne s'allume pas:

- Vérifiez que le disjoncteur du lave-vaisselle est en position marche.
- Vérifiez pour que le cordon d'alimentation est bien branché.

L'eau n'entre pas dans le lave-vaisselle :


- Vérifiez que le robinet d'eau est en position ALLUMÉE.

L'eau ne s'écoule pas:

- Assurez-vous que le tuyau de vidange n'est pas plié ou qu'il ne sort pas de la coupure antirefoulement à côté de l'évier.
- Retirez le tuyau de vidange de la poubelle en vous assurant que le bouchon est retiré.

Instructions :

- Si votre lave-vaisselle ne fonctionne pas correctement après avoir suivi ces étapes : Communiquez avec votre revendeur pour faire inspecter votre nouveau lave-vaisselle par un service après-vente autorisé afin de déceler tout défaut lié au fonctionnement du lave-vaisselle.
- La garantie du fabricant ne couvre pas l'installation, la conversion ou les visites de service de formation du client.



Vous trouverez les informations sur le modèle et le numéro de série sur l'étiquette située sur le côté droit de la porte intérieure de votre lave-vaisselle, comme indiqué ci-dessus.

Instructions :

Veuillez faire une copie de votre facture et la conserver avec ce manuel et enregistrer votre lave-vaisselle en ligne.