

PRODUCT DIMENSIONS

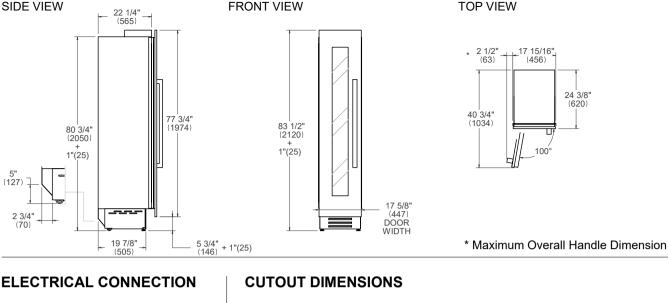


TOP VIEW



(127)MAX


A properly-grounded, horizontally-mounted electrical Ε receptacle should be installed according to this drawing.



INSTALLATION REQUIREMENTS

FRONT VIEW

If the appliance(s) is not connected through the side profile trims to secured cabinetry anti-tip brackets must be installed.

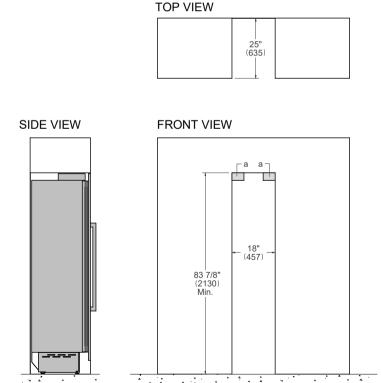

(a) Area to be left clear for the anti-tipping brackets – 3"1/2x5" (82x127mm)